


ASUS® P4T Update

Modifications to the motherboard CPU mounting assembly on pages 25 to 29, Section 3, Hardware Setup.

If your P4T-M does not have the *rubber* and *metal baseboard mounting plates*, please follow these instructions. The baseboard installation step on page 26 is omitted. Since the CPU heatsink mount is modified, new parts for mounting the heatsink assembly are pictured here. The black plastic *heatsink support braces* have built-in *retaining clips*, right. The *pan head screws* are replaced with a new two-piece *plastic collar and plug* assembly, below.




1. Mount the CPU as shown on page 27. Mount the *heatsink support braces* as shown on page 28 and insert the four black *plastic collars* from the top through to the bottom of the motherboard. Insert the white *plastic plugs* into the middle of the black collars and pop them firmly out the bottom of the motherboard.

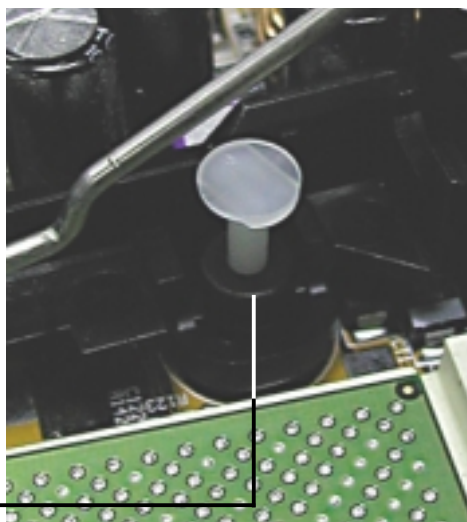

2. Open the retaining clips, place the heatsink on the CPU, then close and snap the clips into the locked position.

SPECIFICATIONS AND INFORMATION CONTAINED HERE ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUSTeK COMPUTER INC. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

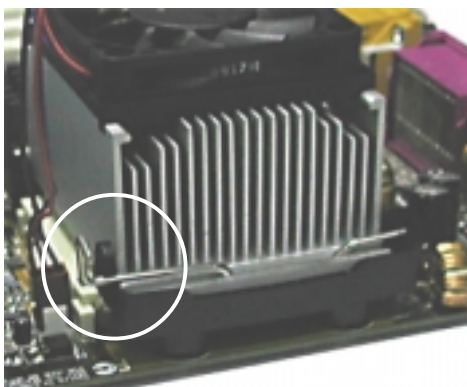

Copyright © 2001 ASUSTeK COMPUTER INC. All Rights Reserved.