

ASUS A7N8X-XE technical updates

1.9 Switch and jumpers

1. CPU external frequency selection (FSB_SEL0, FSB_SEL1)

The motherboard frequency is adjusted through the jumpers. The illustration below shows the positions of the jumper caps.




The option to set the CPU core bus frequency multiple is available only on unlocked CPUs. If you are using a locked CPU, setting the switches does not produce any effect.

The jumpers tells the clock generator what frequency to send the CPU. This allows the selection of the CPU's external frequency (or bus clock). The bus clock multiplied by the frequency multiple equals the CPU's internal frequency (the advertised CPU speed).



The default CPU external frequency is 100MHz. If your CPU supports 200/166/133 MHz external frequency, adjust the jumper settings before installing the motherboard to the chassis.

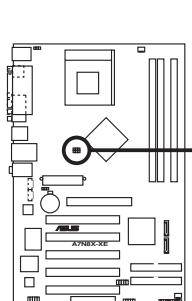

FSB	CPU External Frequency
400	200MHz
333	166MHz
266	133MHz
200	100MHz

FSB_SEL0	1 2 3	1 2 3	1 2 3	1 2 3
FSB_SEL1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	400MHz	333MHz	266MHz	200MHz

A7N8X-XE External frequency selection



Set the CPU frequency only to the recommended settings. Frequencies other than the recommended CPU bus frequencies are not guaranteed to be stable.

15-063579100

ASUS A7N8X-XE technical updates