



V8200 Series

Programmable nFiniteFX™
Graphics Card

USER'S MANUAL

Hardware & Video Drivers

V8200 / Deluxe

V8200 / Pure

USER'S NOTICE

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

- NVIDIA, nFiniteFX, GeForce3, and Lightspeed Memory Architecture are registered trademarks of NVIDIA Corporation.
- Windows, MS-DOS, and DirectX are registered trademarks of Microsoft Corporation.
- Adobe and Acrobat are registered trademarks of Adobe Systems Incorporated.

The product name and revision number are both printed on the product itself. Manual revisions are released for each product design represented by the digit before and after the period of the manual revision number. Manual updates are represented by the third digit in the manual revision number.

For previous or updated manuals, BIOS, drivers, or product release information, contact ASUS at <http://www.asus.com.tw> or through any of the means indicated on the following page.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Copyright © 2001 ASUSTeK COMPUTER INC. All Rights Reserved.

Product Name:	ASUS V8200 Series
Manual Revision:	1.00 E835
Release Date:	August 2001

ASUS CONTACT INFORMATION

ASUSTeK COMPUTER INC. (Asia-Pacific)

Marketing

Address: 150 Li-Te Road, Peitou, Taipei, Taiwan 112
Telephone: +886-2-2894-3447
Fax: +886-2-2894-3449
Email: info@asus.com.tw

Technical Support

MB/Others (Tel): +886-2-2890-7121 (English)
Notebook (Tel): +886-2-2890-7122 (English)
Desktop/Server (Tel): +886-2-2890-7123 (English)
Fax: +886-2-2893-7775
Email: tsd@asus.com.tw
WWW: www.asus.com.tw
FTP: ftp.asus.com.tw/pub/ASUS

ASUS COMPUTER INTERNATIONAL (America)

Marketing

Address: 6737 Mowry Avenue, Mowry Business Center, Building 2
Newark, CA 94560, USA
Fax: +1-510-608-4555
Email: tmd1@asus.com

Technical Support

Fax: +1-510-608-4555
Email: tsd@asus.com
WWW: www.asus.com
FTP: ftp.asus.com/Pub/ASUS

ASUS COMPUTER GmbH (Europe)

Marketing

Address: Harkortstr. 25, 40880 Ratingen, BRD, Germany
Fax: +49-2102-442066
Email: sales@asuscom.de (for marketing requests only)

Technical Support

Hotline: MB/Others: +49-2102-9599-0 Notebook: +49-2102-9599-10
Fax: +49-2102-9599-11
Support (Email): www.asuscom.de/de/support (for online support)
WWW: www.asuscom.de
FTP: ftp.asuscom.de/pub/ASUSCOM

CONTENTS

I. Introduction	7
Highlights	7
Available Models	7
ASUS V8200 Deluxe	7
ASUS V8200	7
Features	8
2. Hardware Setup	9
ASUS V8200 Deluxe	9
ASUS V8200 / Pure	10
Installation Procedures	11
New VGA Cards	11
Systems with Existing VGA Card	11
Operating System Requirements	12
Windows 98	12
3. Software Setup	13
Display Driver Installation	13
Windows 98	13
Method 1: ASUS Quick Setup Program	13
Method 2: Display Property Page	14
Method 3: Plug and Play	15
Windows 2000	15
Method 1: ASUS Quick Setup Program	15
Method 2: Plug and Play	16
Windows NT 4.0	18
Method 1: Display Property Page	18
Drivers	19
Install Display Driver	19
Install DirectX	20
Install GART Driver	21
Install ASUS TWAIN Driver	23
Uninstall Display Driver	24
Windows 98	24
Method1: Using the Autorun Screen	24
Method 2: Using Control Panel	24
Windows 2000	25
Method1: Using the Autorun Screen	25
Method 2: Using Control Panel	25
Windows NT 4.0	25
Method 1: Using Control Panel	25
Install WDM Capture Driver	26
Install Video for Windows Capture Driver	27
Utilities	28

CONTENTS

Install ASUS Live Utility	28
Utilities	29
Install ASUS Tweak Utility	29
Install SmartDoctor	30
Install VideoSecurity	31
4. Software Reference	33
ASUS Control Panel	33
Refresh Rate	33
More Resolution	34
Information	34
Color	35
Advanced	37
Windows Display Properties	45
Device Selection	45
Analog Monitor	46
Digital Flat Panel	47
TV	48
Color Correction	49
Digital Vibrance	49
Active Color Channel	49
Brightness / Contrast / Gamma	49
Custom color settings	49
GeForce3	50
Additional Properties	50
3D Antialiasing Setting	50
Direct3D Settings	51
OpenGL Settings	53
Overly Controls	54
Desktop Utilities	55
Desktop Display Manager	56
Using the ASUS Utilities	59
ASUS Tweak Utility	59
ASUS VideoSecurity	61
ASUS Live Video	65
ASUS SmartDoctor	74
ASUS Digital VCR	77
Using the Other Utilities	91
ASUS TWAIN Interface	91
ASUS VR PictureViewer	93
5. Resolution Table	95
6. Troubleshooting	97
Description	97
Recommended Action	97
Index	99

FCC & DOC COMPLIANCE

Federal Communications Commission Statement

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING! The use of shielded cables for connection of the monitor to the graphics card is required to assure compliance with FCC regulations. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Canadian Department of Communications Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Macrovision Corporation Product Notice

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only *unless otherwise authorized by Macrovision Corporation*. Reverse engineering or disassembly is prohibited.

I. Introduction

Thank you for purchasing an ASUS V8200 GeForce3™ Graphics Card. With this purchase, you join an ever-increasing elite squadron of graphics enthusiasts.

Powered by the NVIDIA™ GeForce3™ graphics processing unit (GPU) and featuring the new nFiniteFX™ engine and DDR (Double Data Rate) memory with Lightspeed Memory Architecture™, the ASUS V8200 delivers not only cutting-edge graphics performance but also image fidelity regardless of the CPU (central processing unit) your computer system is using.

With the ASUS V8200, you will not only see but also experience dynamic, more realistic and compelling 3D worlds and characters.

Highlights

- **Powered with the world's first programmable 3D graphics chip architecture** NVIDIA® GeForce3™ Graphics Processing Unit (GPU) with the new nFiniteFX™ engine
- **Built-in high speed DDR video memory with Lightspeed Memory Architecture™** Delivers earth-shattering performance and fluid motion even for the most complex scenes
- **Programmable vertex and pixel shader** Enables up to 32-matrix skinning, custom lighting and texture blending models
- **3.2 Billion Samples per Second FSAA Fill Rate, 800 Billion Operations per Second, 76 GigaFLOPS** Breakthrough performance improvement compared with the GeForce2 series
- **ASUS SmartDoctor™ Technologies** Provides the greatest operating safety for your valuable system
- **Optimized for DirectX® 8 and OpenGL® Features** Ensures broad application support

Available Models

ASUS V8200 Deluxe

- DDR Frame Buffer, VGA + Video-in + TV-out + 3D glasses (ASUS VR-100G Bundled Free)

ASUS V8200 Pure

- DDR Frame Buffer, Pure VGA


1. Introduction

Features

- The first programmable nFinite-FX™ Engine: Ability to create an infinite number of special effects that bring realistic 3D characters and environments to life
- 3.2 billion samples per second Full-scene Anti-aliasing (FSAA) fill rate
- 57 million transistors with 800 billion operations per second
- Raw computational power over 800 billion operations per second and 76 GigaFLOPS per second
- RenderScale Technology and Lightspeed Memory Architecture: Dramatically improve memory bandwidth efficiency up to 7.4GB/sec
- First to offer high resolution, high frame rate, Full-Scene Anti-aliasing (FSAA)
- Optimized for DirectX® and OpenGL® acceleration
- 8 texture-mapped, filtered, lit texels per clock cycle
- Single-pass multitexturing, 32-bit colors, Z/stencil buffer
- Advanced per-pixel lighting, texturing, and shading
- Cube environment mapping, bump mapping, S3 texture compression
- Programmable Vertex Shader offers complex animation to generate smooth animation and nature-look characters
- Programmable for lens effects, such as wide angle and fish eye
- Programmable for atmospheric effects, such as layer fog and volumetric fog
- Programmable Pixel Shader offers per-pixel Z-Correct reflective bump mapping
- Multibuffering (double, triple, quad) for smooth animation and video playback
- Multiple video windows with hardware color space conversion and filtering (YUV 4:2:2 and 4:2:0)
- AGP 4X / 2X / 1X complete support

2. Hardware Setup

ASUS V8200 Deluxe DDR Frame Buffer

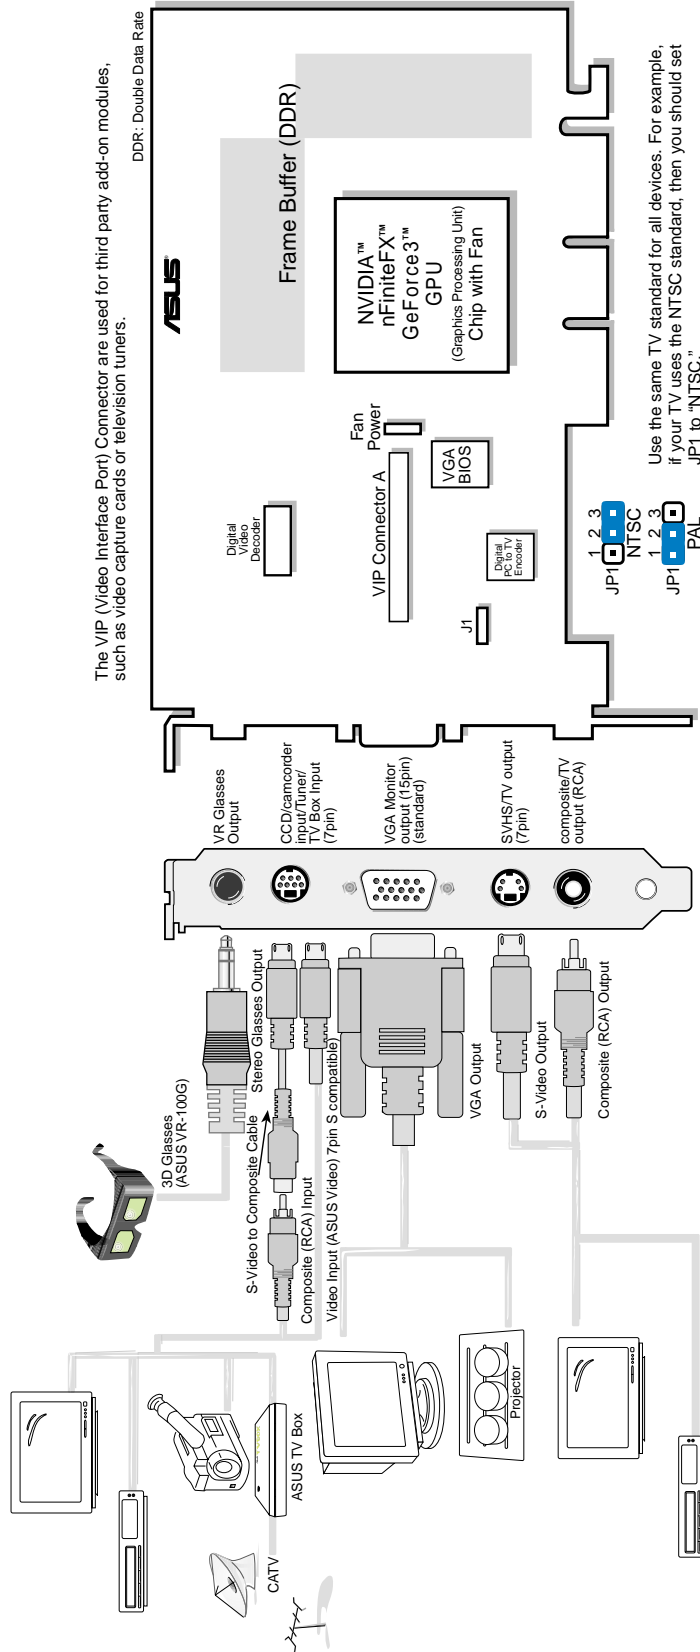

Item Checklist


- ASUS AGP-V8200 Deluxe Graphics Card (PAL or NTSC)
- ASUS VR-100G
- This User's Manual
- ASUS V8200 Series Driver & Utility CD Disc

Notes

- Use the same TV standard for all devices.
- and cannot be connected at the same time.

2. H/W Setup Deluxe

ASUS V8200 / Pure DDR Frame Buffer

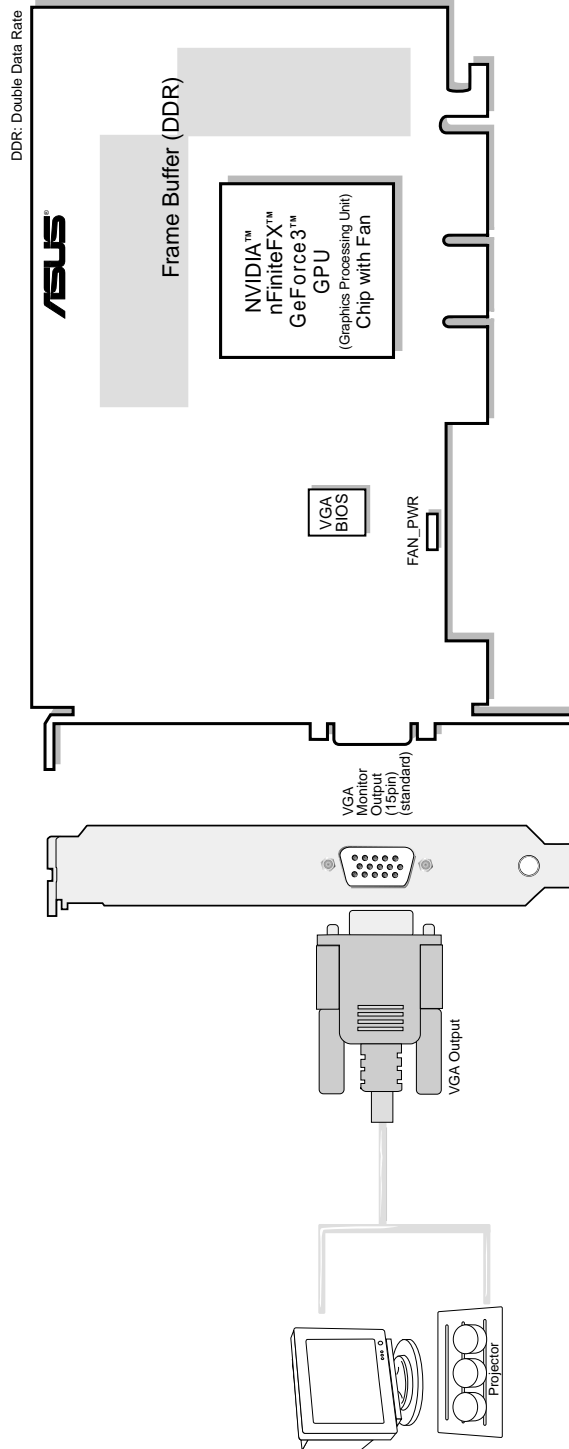

Item Checklist

- ASUS AGP-V8200 Graphics Card
- ASUS V8200 Series Driver & Utility CD Disc

NOTE: This graphics card series can only be installed in motherboards with an AGP slot.

WARNING! Computer boards and components contain very delicate Integrated Circuit (IC) chips. To protect the computer board and other components against damage from static electricity, you must follow some precautions.

1. Make sure that you unplug your power supply when adding or removing expansion cards or other system components. Failure to do so may cause severe damage to both your motherboard and expansion cards.
2. Keep all components such as the host adapter in its antistatic bag until you are ready to install it.
3. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case. Hold components by the edges and try not to touch the IC chips, leads, or circuitry.
4. Place components on a grounded antistatic pad or on the bag that came with the component whenever the components are separated from the system.

Installation Procedures

New VGA Cards

1. Unplug all electrical cords on your computer.
2. Remove the system unit cover.
3. Locate the AGP bus expansion slot. Make sure this slot is unobstructed.
4. Remove the corresponding expansion slot cover from the computer chassis.
5. Ground yourself to an antistatic mat or other grounded source .
6. Pick up the board (still in its sleeve) by grasping the edge bracket with one hand and then remove the plastic sleeve.
7. Position the card directly over the AGP slot and insert one end of the board in the slot first. Firmly but gently press the bus connector on the bottom of the card down into the slot. Be sure the metal contacts on the bottom of the host adapter are securely seated in the slot.
8. Anchor the board's mounting bracket to the computer chassis using the screw from the slot cover that you set aside previously.
9. Replace the cover on the system unit.
10. Connect your analog monitor's 15-pin VGA connector to the card and fasten the retaining screws (if any).
11. Connect other cables and devices if available - You are now ready to install the software drivers and utilities.

Systems with Existing VGA Card

1. Change your display driver to Standard VGA.
2. Shut down your computer and unplug all electrical cords.
3. Replace the existing VGA card with your graphics card.
4. Restart your computer.
5. Install the ASUS V7100 series display driver.

2. Hardware Setup

Operating System Requirements

NOTE: This graphics card requires a motherboard with an AGP slot.

Windows 98

Windows 98 includes VGARTD for the major chipsets but it is recommended that you install VGARTD from the support CD to make sure that you have the latest version of VGARTD (*see* **III. Software Setup | Install GART Driver**).

NOTES

- VGARTD stands for Virtual Graphics Address Remapping Table Driver, which is necessary to use the DIME feature of AGP. DIME means Direct Memory Execute, which is accessed *directly* by most AGP chips (when VGARTD is installed) for complex texture-mapping operations.
- For other notes or release information, see the README files in the installation CD disc.
- This Manual assumes that your CD-ROM disc drive is drive D: and that Windows is in C:\WINDOWS. Replace either with the actual location, if necessary.

3. Software Setup

Display Driver Installation

You can use one of the recommended methods to install the display drivers for your graphics card, depending on your operating system.

NOTE: The screen displays in this manual may not reflect exactly the screen contents displayed on your screen. The contents of the support CD are subject to change at any time without notice.

Windows 98

Method 2 and Method 3 will not install the appropriate AGP GART driver if your motherboard does not use the Intel AGPset. Installing the AGP GART driver will ensure that the AGPset's AGP functions are available. Method 2 and Method 3 will not install also the DirectX runtime libraries. DirectX must be installed so that your video player can take advantage of hardware acceleration. *See 3. Software Setup | Install GART Driver and 3. Software Setup | Install DirectX* later in this manual for the setup steps.

Method 1: ASUS Quick Setup Program

NOTE: *See 3. Software Setup | Drivers | Install Display Driver* for more information.

1. Start Windows.
2. Switch display to Windows' Standard Display Adapter (VGA) mode and then restart Windows.
3. Insert the CD installation disc into your CD-ROM drive.
4. The Install Shell appears. Click **Drivers** and then click **Install Display Driver** on the **Drivers** dialog box.



5. Follow the onscreen instructions to complete the setup.
6. When Setup has finished installing all the necessary files on your computer, it will prompt you to restart your computer. Click **Yes...** and then **Finish** to restart your computer and to complete Setup.

3. Software Setup

Method 2: Display Property Page

1. Start Windows.
2. Switch display to Windows' Standard Display Adapter (VGA) mode and then restart Windows.
3. Right-click the Windows desktop and click **Properties**.
4. Click the **Settings** tab and then click **Advanced**. The **Standard Display Adapter (VGA) Properties** dialog box appears.
5. Click **Change** on the **Adapter** tab. The **Update Device Driver Wizard** dialog box appears. Click **Next**, click **Display a list of all the drivers...** and then click **Next**.
6. Click **Show all hardware** and then click **Have Disk...** When the **Install From Disk** dialog box appears, type the location of the ASUSNV9X.INF file (WIN9X folder) and then proceed to step 9. Otherwise, proceed to the next step.
7. Click **Browse** to search the CD-ROM drive. In the **Drives** box of the **Open** dialog box, select your CD-ROM drive and then click **OK**.
8. In the **Folders** box, double-click the WIN9x folder and then select ASUSNV9X.INF in the **File name** box.
9. Click **OK**. A list of video cards appears. Select your VGA card type for your operating system and then click **OK**.
10. The **Update Driver Warning** box appears. Click **Yes** to confirm the setting up of the ASUS enhanced display drivers and then follow the onscreen instructions to start the setup.
11. Setup will prompt you when it has finished installing all the necessary files on your computer. Click **Finish** to close Setup.
12. When you are returned to the **Standard Display Adapter (VGA) Properties** box, click **Close**. The **Display Properties** box appears. Click **Close**.
13. The system will prompt you to restart your computer. Click **Yes** to restart your computer and to complete Setup.




3. Software Setup

Method 3: Plug and Play

NOTE: Before proceeding with these steps, replace first your old VGA card with an ASUS AGP-V7100 series graphics card.

1. Start Windows.
2. When Windows detects your ASUS AGP-V7100 series graphics card, the **New Hardware Found** dialog box appears.
3. Click **Driver from disk provided by hardware manufacturer**.
4. When Setup prompts you for the location of the driver, type D:\WIN9x to direct Setup to the INF file and then click **Finish** to install the driver.
5. When Setup has finished installing all the necessary files on your computer, it will prompt you to restart your computer. Click **Yes** to restart your computer and to complete Setup.

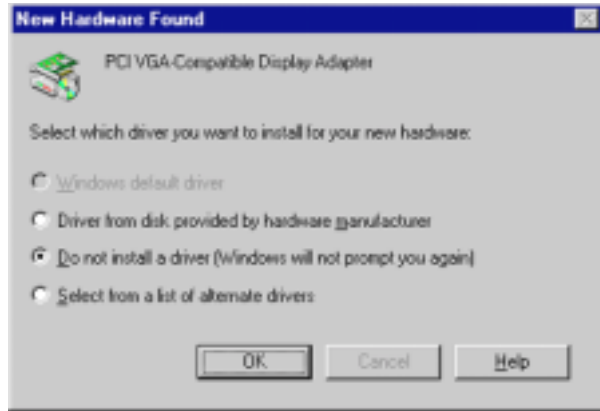

Windows 2000

Method 1: ASUS Quick Setup Program

1. Start Windows.
2. When Windows detects your ASUS graphics card, the **Found New Hardware Wizard** dialog box appears.
3. Click **Cancel** to enter the Windows desktop.
4. Insert the CD installation disc into your CD-ROM drive.
5. The ASUS Windows 2000 Install Shell appears. Click **Drivers** and then click **Install Display Driver** on the **Driver** dialog box.
6. Follow the onscreen instructions to complete the setup.
7. When Setup has finished installing all the necessary files on your computer, it will prompt you to restart your computer. Click **Yes** to restart your computer and to complete Setup.



3. Software Setup

Method 2: Plug and Play

1. Start Windows.
2. When Windows detects your ASUS graphics card, the **Found New Hardware Wizard** dialog box appears.



3. Click **Next**.
4. When the next **Found New Hardware Wizard** dialog box appears, select **Search for a suitable driver for my device (recommended)** and then click **Next**.




5. Insert the CD installation disc into your CD-ROM drive to bring up the **Locate Driver Files** item of the **Found New Hardware Wizard** dialog box.
6. Check **CD-ROM drives**, uncheck all other options and then click **Next** to search for the drivers of your graphics card.




3. Software Setup

- When the wizard has finished searching for driver files for your graphics card, select **Install one of the other drivers** and then click **Next** from the **Driver Files Search Results** item of the **Found New Hardware Wizard** dialog box.

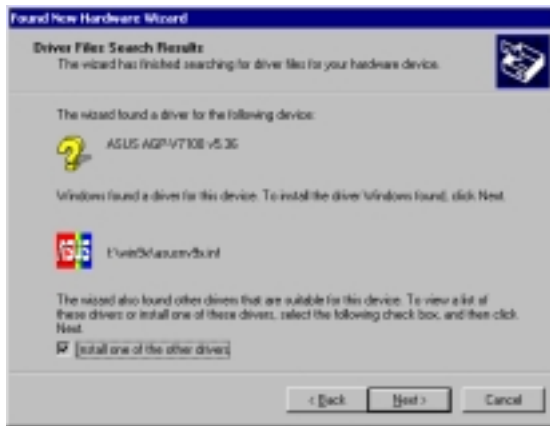

- When prompted to select the display driver to install in your system, select the one that is located in the D:\WIN2K and then click **Next**.

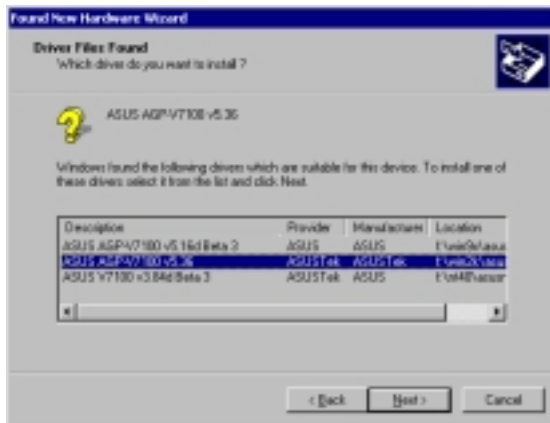

- Follow the onscreen instructions to complete the setup.
- When Setup has finished installing all the necessary files on your computer, it will prompt you to restart your computer.

Click **OK** to restart your computer and to complete Setup.

3. Software Setup

Windows NT 4.0

Method 1: Display Property Page

WARNING! Before installing the display driver in Windows NT 4.0, make sure that you have installed **Windows NT 4.0 Service Pack 3 or later, to take full advantage of the AGP features of your card.** (You may download service packs at <http://www.microsoft.com/ntworkstation/downloads>.)

NOTE: The following steps assume your CD-ROM drive letter is D.

1. Start Windows NT, switch display properties to VGA mode (16 colors, 640 x 480 pixels), then restart your computer to make the change.
2. After your computer restarts, right-click the desktop and click **Properties**.
3. Click the **Settings** tab.
4. Select **Change Display Type**.
5. Select **Adapter Type** and click **Change**.
6. Click **Have Disk**.
7. Insert the CD installation disc.
8. Type **D:\NT40** or click **Browse** to select the path of the display driver for Windows NT. Click **OK**.
9. Select **ASUS V7100** and then click **OK**.
10. Windows NT will once again prompt for confirmation. All appropriate files are then copied to the hard disk. When all files are copied, go back to the **Display Properties** box by clicking **Close**. Click **Apply**.
11. The **System Settings Change** dialog box is displayed. Click **Yes** to restart Windows.
12. Windows NT will restart with the default settings. The Display applet will appear to allow for mode selection.

3. Software Setup

Drivers

- NOTES:**
- 1) The screen displays in this manual may not reflect exactly the screen contents displayed on your screen. The contents of the support CD are subject to change at any time without notice.
 - 2) Unless otherwise indicated, the procedures under **Drivers** apply to all the operating systems supported, namely, Windows 98, Windows 2000, and Windows NT 4.0.

Install Display Driver

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.

Click **Drivers**.

2. **Windows 98:** The **Drivers** box appears. Click **Install Display Driver** to install all the drivers and utilities into your computer. Setup will install the drivers in the following order: Display Driver (Direct3D and OpenGL Drivers), DirectX runtime libraries, and VGART driver. Just follow the on-screen instructions to complete the installation.

Windows 2000: Setup will only copy the display drivers.

Windows NT 4.0: SETUPNT.TXT will appear. Follow the instructions to install the display driver. You may refer to the installation procedures earlier in **3. Software Setup | Windows NT 4.0 | Method 1: Display Property Page**.

If you prefer to install the drivers individually, follow the steps on the following pages.



3. Software Setup

Install DirectX

Windows 98 Only

Microsoft DirectX allows 3D hardware acceleration support in Windows 98. For Software MPEG support in Windows 98, you must first install Microsoft DirectX, and then an MPEG-compliant video player.

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.


Click **Drivers**.



2. The **Drivers** box appears. Click **Install DirectX** to select the DirectX version you want to install.



3. The installation program will automatically install the DirectX 7 runtime libraries into your system.

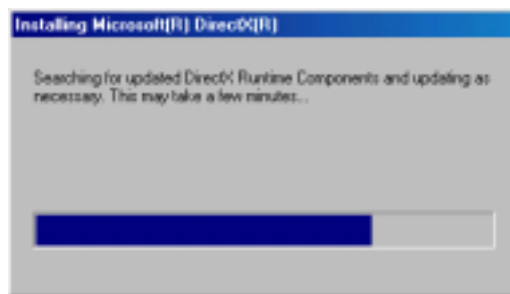

4. Setup will prompt when it has finished copying all the files to your computer. Click **OK** to finish the installation.



WARNING! Some games written for older DirectX versions may not work properly under DirectX8. Make sure that your applications or games support DirectX8 before installing the DirectX8 runtime libraries. DirectX8 currently cannot be uninstalled by regular means, such as outlined in **3. Software Setup | Uninstall Display Driver**.

3. Software Setup

Install GART Driver

Windows 98/Windows 2000

The AGP GART Driver is used to support AGP functionality for the chipset on your PC's motherboard. It is recommended to install the GART driver if it is newer than the one you have installed in your system. The GART driver is only necessary for an AGP graphics card.

NOTE: Installation dialogs are slightly different for each chipset. Follow the on-screen instructions to finish the GART driver installation. The succeeding steps assume that you are installing for an Intel chipset.

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.

Click **Drivers**.


2. The **Drivers** box appears. Click **Install GART Driver** to install AGP support for motherboards with Intel, AMD, VIA, SiS, or ALi chipsets.

3. The **AGP VGARTD Driver Detection** box appears with the chipset detected on your motherboard. Click **OK** to install the appropriate driver for your AGPset.




3. Software Setup


4. If you selected **No...**, on the previous screen before clicking **OK**, you will be presented with a selection of other drivers. Make your driver selection and click **Install**.

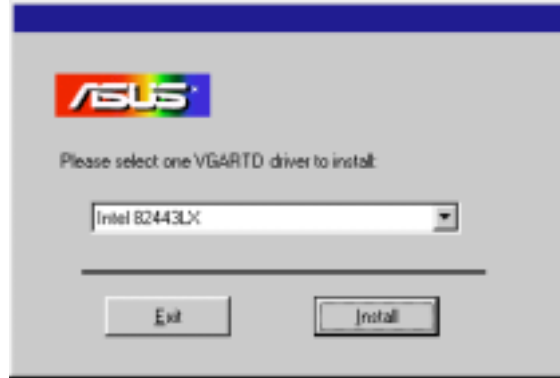

5. When the **Welcome** screen appears, click **Next** to continue.

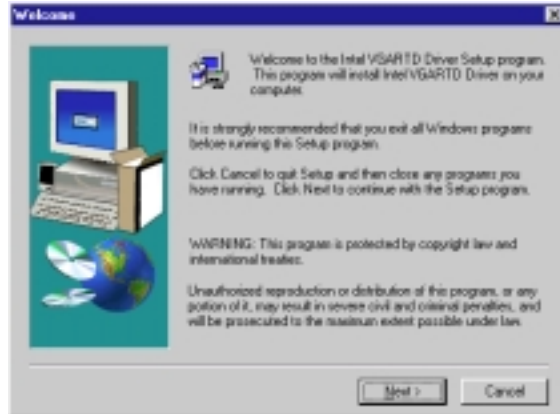

6. Once the driver installation is finished, click **Finish**.

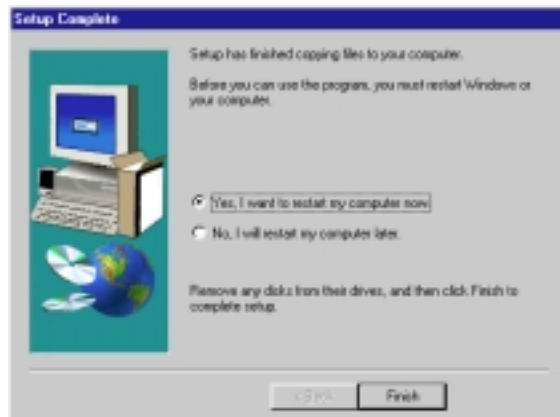

3. Software Setup

Install ASUS TWAIN Driver

Only with Deluxe /Windows 98

ASUS TWAIN Driver is a frame capture driver for Adobe Photoshop®, an image editing software. With this driver, you can capture still images through Photoshop using the video input port of your card (*Deluxe Combo/Windows 98 only*).

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.


Click **Drivers**.

2. The **Drivers** box appears. Click **Install ASUS TWAIN Driver..**



3. When the **Welcome** box appears, click **Next** to start copying the files. Setup automatically starts copying the necessary files to the default folder.

To complete the installation, simply follow the on-screen instructions or prompts.

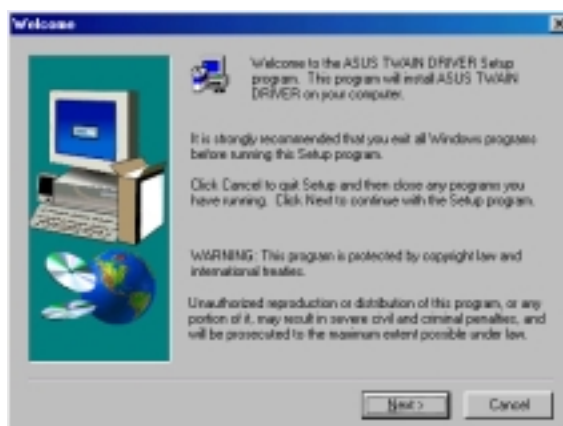

3. Software Setup

Uninstall Display Driver

If you want to update your display drivers or if you no longer need the display drivers for your card, you can use one of the following procedures to completely uninstall the drivers from your system to save disk space.

Windows 98

Method 1: Using the Autorun Screen

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.


Click **Drivers**.

2. Click **Uninstall Display Driver** and follow the on-screen directions.



Method 2: Using Control Panel

1. Click **Start**, and then point to **Settings**.
2. Click **Control Panel**.
3. Double-click the **Add/Remove Programs** icon.
4. Click the **Install/Uninstall** tab.
5. Click **ASUS Display Drivers** from the list.
6. Click **Add/Remove**.
7. The system will prompt you to restart your computer. Click **Yes** to restart.

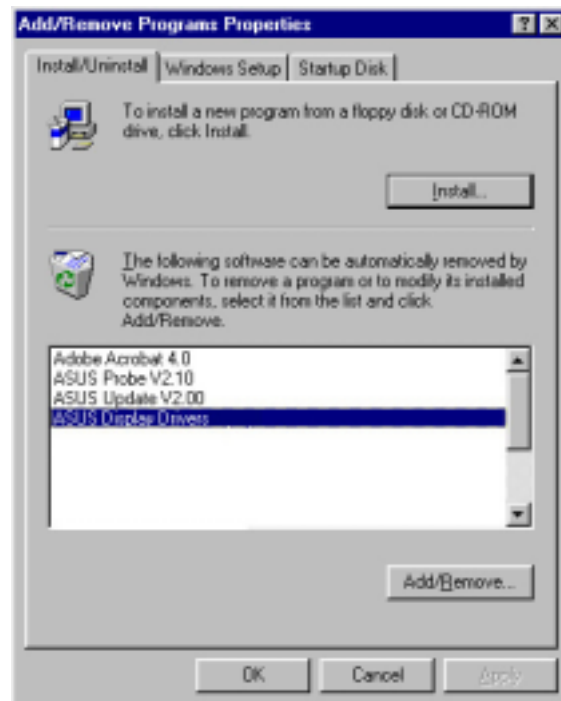

3. Software Setup


Windows 2000

Method 1: Using the Autorun Screen

See **Windows 98 | Method 1: Using the Autorun Screen** earlier in this section for the procedures.

Method 2: Using Control Panel

1. Click **Start**, and then point to **Settings**.
2. Click **Control Panel**.
3. Double-click the **Add/Remove Programs** icon.
4. Click the **Change/Remove Programs** icon.
5. Click **ASUS Display Drivers** from the list.
6. Click **Change/Remove**.
7. The system will prompt you to restart your computer. Click **Yes** to restart.

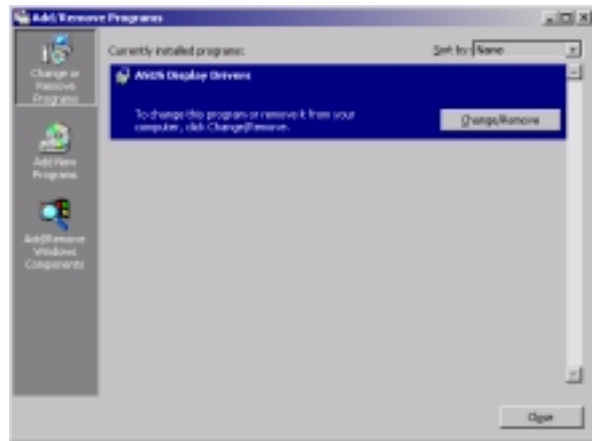

Windows NT 4.0

Method 1: Using Control Panel

1. Click **Start**, and then point to **Settings**.
2. Click **Control Panel**.
3. Double-click the **Add/Remove Programs** icon.
4. Click the **Install/Uninstall** tab.
5. Click **ASUS Display Drivers** from the list.
6. Click **Add/Remove**.
7. The system will prompt you to restart your computer. Click **Yes** to restart.

3. Software Setup

Install WDM Capture Driver

Windows 98/Windows 2000

The WDM Capture Driver must be installed to use some of the latest VCR applications. The driver conforms to the Microsoft Windows Driver Model (WDM) standard.


1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.

Click **Drivers**.

2. The **Drivers** box appears. Click the **Next Page** arrow and then click **Install WDM Capture Driver**.



3. When the **ASUS WDM Capture Driver Setup** box appears, click **Install ASUS WDM Capture driver** and then click **OK**.

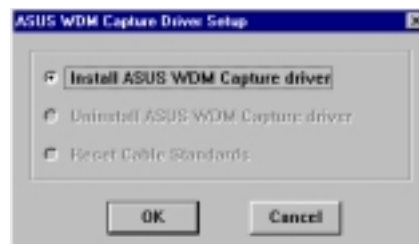

4. When the **Installation** box appears, click the appropriate TV standard for your system and then click **OK**.



To complete the installation, simply follow the on-screen instructions or prompts.

3. Software Setup

Install Video for Windows Capture Driver

Windows 2000/NT 4.0 Only

The Video for Windows Capture Driver must be installed to use ASUS Live Video (see **IV. Software Reference | ASUS Live Video**). This driver conforms to the Microsoft Video for Windows standard.

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.

Click **Drivers** and when the **Drivers** box appears, click **Install Video for Windows Capture Driver**.



To complete the installation, simply follow the on-screen instructions or prompts.

NOTE: Under Windows 98, the Video for Windows capture driver is installed during the installation of the display drivers.

3. Software Setup

Utilities

Install ASUS Live Utility

The ASUS Live utility lets you view and capture video images from the card's video input port.

NOTE: Make sure that you have an ASUS graphics card with VIDEO-IN connector before attempting to install the utility.

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.

Click **Utilities**.



2. The **Utilities** box appears. Click **Install ASUS Live Utility**.



3. When the **Welcome** box appears, click **Next** to start copying the files. Setup automatically starts copying the necessary files to the default folder.

To complete the installation, simply follow the on-screen instructions or prompts.



3. Software Setup

Utilities

Install ASUS Tweak Utility

The ASUS Tweak Utility lets you control the core clock speed and the memory interface speed of your graphics card.

WARNING! Use this option with caution. Using this inappropriately may damage your card and cause your system to be unstable.

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.


Click **Utilities**.



2. The **Utilities** box appears. Click **Install ASUS Tweak Utility**



3. When the **Welcome** box appears, click **Next**.

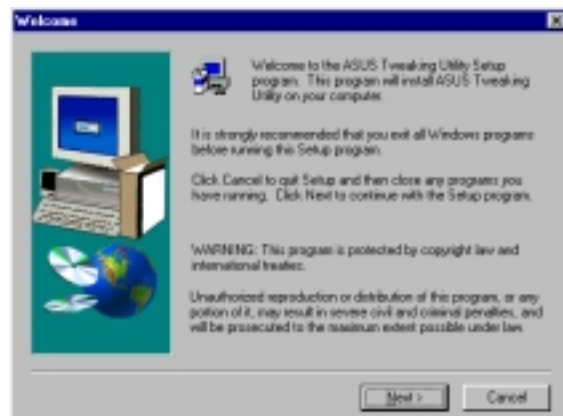

To complete the installation, simply follow the on-screen instructions or prompts.

3. Software Setup

Install SmartDoctor

SmartDoctor is a utility that monitors the card's graphic chip state, alerting users about abnormal events, such as a fan malfunction or chip overheat. Likewise, the utility "cools" down the graphic chip temperature when it is idle or returns it to its maximum capability when necessary.

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.

Click **Utilities**.




2. The **Utilities** box appears. Click **Install SmartDoctor**.

NOTE: If your graphics card is not equipped with a monitor IC, an error message warns you that monitor IC was not detected. The installation will abort. **SmartDoctor** works only with cards with a monitor IC.



3. When the **Welcome** box appears, click **Next** to start the installation.

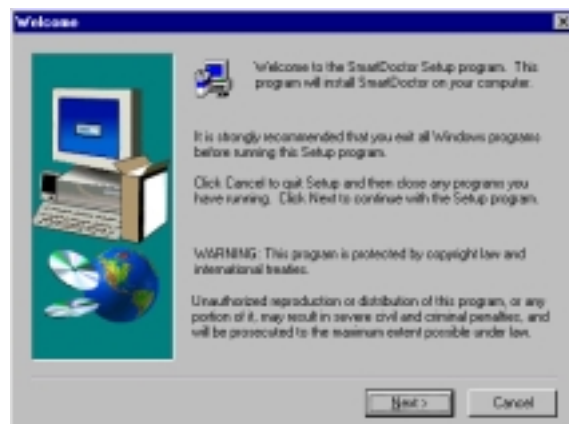

To complete the installation, simply follow the on-screen instructions or prompts.

3. Software Setup

Install VideoSecurity

Windows 98 Only

VideoSecurity is a powerful video stream comparison and detection utility that helps in detecting potential errors or intrusions at a specific time interval by using a video capture device, such as a digital camera.

1. Insert the CD installation disc into your CD-ROM drive or double click the CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of your CD-ROM drive.

Click **Utilities**.




2. The **Utilities** box appears. Click **Install VideoSecurity**.



3. When the **Welcome** box appears, click **Next** to start the installation.

To complete the installation, simply follow the on-screen instructions or prompts.

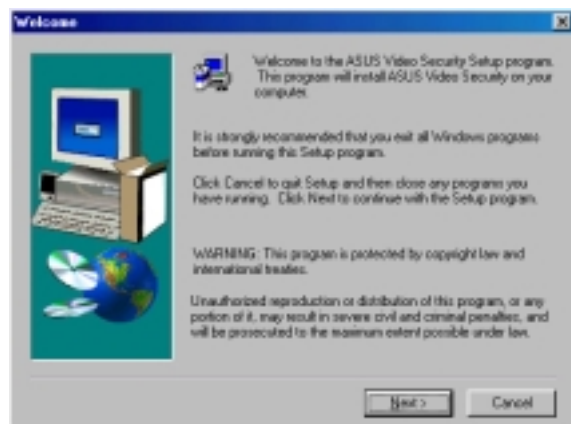

3. Software Setup


(This page was intentionally left blank..)

4. Software Reference

ASUS Control Panel

After installing the display drivers, look for an **ASUS icon** on the **taskbar's status area**. **Clicking** this icon opens the **ASUS Control Panel**, a menu composed of shortcuts to the graphics board's various enhanced functions.

Alternatively: **right-click** the **Windows desktop**, then **click** the **Windows Display Properties** field and then **click** the **Settings** tab. With **Windows 98/2000**, next **click** the **Advanced** button on the **Settings** menu. Click the appropriate tab to change the display settings.

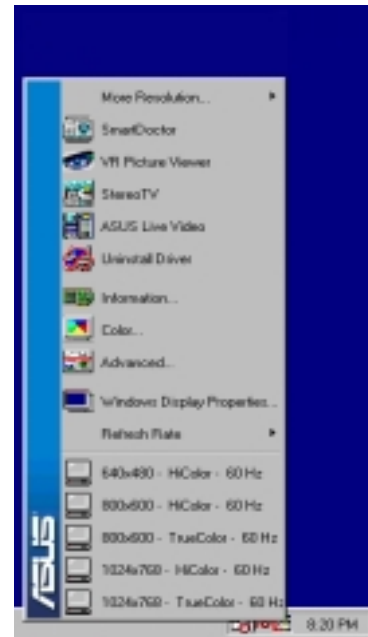

ASUS Control Panel icon 

Refresh Rate


This control changes the refresh rate of the current screen resolution.

WARNING! Be sure that the refresh rate that you select is supported by your monitor. Selecting a refresh rate that is beyond your monitor's specification may damage it. **Press ESC to restore your original settings in case of problems.**

Click/right-click the ASUS Control Panel icon, then point to **Refresh Rate**, and **click** the desired refresh rate.



Next, the system prompts whether to keep the setting. Click **OK** to keep the setting, otherwise, **click Cancel** or **press ESC**.

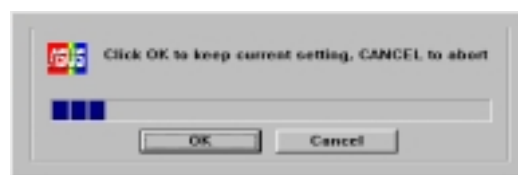

4. S/W Reference
Refresh Rate

4. Software Reference


More Resolution

More Resolution lets you change the screen resolution of your monitor.

Click/right-click the ASUS Control Panel icon, point to **More Resolution**, and then click the desired screen resolution. The system will automatically set the resolution selected without restarting your computer.



WINDOWS 95 USERS: You will be prompted to restart your computer if you select a screen resolution with a different color depth, for example, from 800x600 HiColor to 800x600 TrueColor. Click **OK** to restart your computer to make the change.

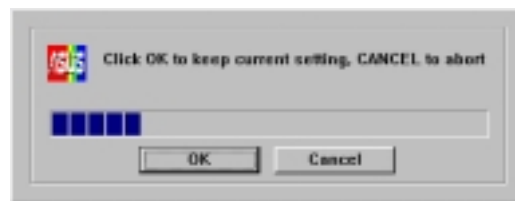

Information

Information lists pertinent data about the graphics card. It supplies links to the **ASUSTeK COMPUTER, INC.** web site for accessing updated data about the graphics board and its latest drivers.



4. Software Reference



Color


Color facilitates **adjustments** to the **brightness**, **contrast** and **gamma** values for each or all of the **RGB colors**. These adjustments can be made for **D3D/Game** and **OpenGL environments**.

D3D/Game

D3D/Game lets you make your favorite color settings for D3D games.

OpenGL

OpenGL lets you make your favorite color settings for OpenGL applications.

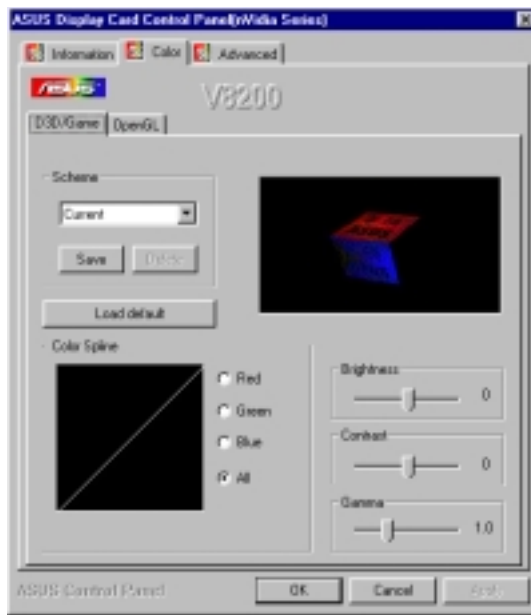

NOTE: The color settings of D3D/Game and OpenGL are not adjustable **below** 8-bit color depth.

4. Software Reference

General Functions

Brightness / Contrast / Gamma

Three sliders calibrate the brightness, contrast, and gamma output of the display card.




D3D/Game / OpenGL

Changes to color settings are shown immediately on your monitor. Dragging a slider to the left decreases the level and to the right increases it. The number at the right of each slider displays the brightness

Value Range: -128 to +128, default: 0, Contrast -30 to 30, default: 0; and Gamma value 0.2 to 3.0, default: 1.0.


Color Spline

This tool shows the distribution of **Red, Green and Blue** color channels as adjustments are made to the **Brightness, Contrast, or Gamma** sliders. Adjust all channels at once: (**All**); or, make individual changes to each channel: (**R, G, or B**).

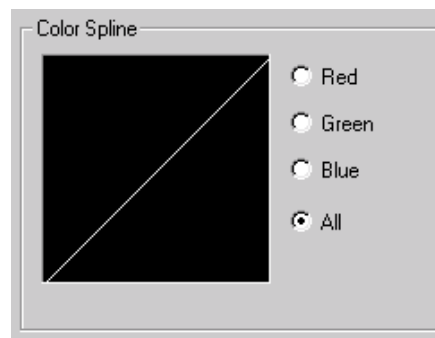

Scheme

This tool changes the appearance of many screen elements simultaneously and functions like a macro; saving a scheme retains particular system presets. Apply existing schemes, or create and save schemes by saving the current settings; existing schemes may be deleted. A scheme may be developed to satisfy the requirements of special situations, ie.: whenever playing a certain game or a movie.

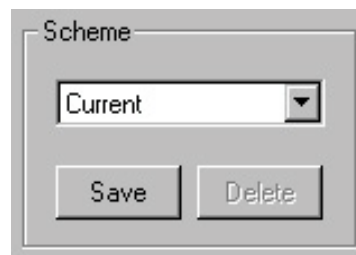

Important Note

D3D/Game

The color settings of **D3D/Game** take effect only when playing a **full-screen DirectDraw/Direct3D** type game.

4. Software Reference



Advanced

This menu supplies sophisticated settings for use with the **ASUS VR-100G 3D Glasses**. These settings are available only with the **Deluxe/TVR** models with **Video-In/TV-Out**, or models with the **ASUS VR-100 Optional Upgrade Kit**.

Direct3D

VR Effect

Lists all parameters to fine tune the stereoscopic effects for **Direct 3D** games.

Enable Stereoscopic Mode

When selected, this enables the stereoscopic mode when playing games or watching 3D videos.

NOTE: Quit all running DirectDraw/Direct3D applications and then restart them for options to take effect.

Load Default

Restores the initial settings.

Depth

Adjust this to add more depth to the scene.

NOTE: If set too high, eye fatigue may occur.

Embossment

Adjust this to add more to the impression that screen objects are being pulled or seem to pop from the screen. (See **On Screen Display** later in this section for more details.) **NOTE:** If set too high, eye discomfort and fatigue may occur.

Direction

Sometimes, moving the slider to the left when adjusting **embossment** does not give the expected effects. Therefore, it may be necessary to adjust the **direction** effect slider **leftwards** to gain added responsiveness.

Foreground

Foreground is set in conjunction with **background** to stretch the **histogram chart** on the **D3D OSD box** of current games to scale the depth of 3D objects (see pages 49 and 50 for an examples and more info). Move the **foreground** slider **leftwards** to shift the foreground along the Z-axis towards “0.”

Background

Background is set in conjunction with **foreground** to stretch the **histogram chart** on the **D3D OSD box** of current games to scale the depth of 3D objects. Move the **foreground** slider **leftwards** to shift the foreground along the Z-axis toward “100.”

Blind

This slider discards “garbage,” cropping out unwanted areas from the left/right peripheries of the display. Setting to “0” does not discard any of the display area, while setting to a higher value crops them away.



4. Software Reference

Main Program

This field is used in conjunction with the **Scheme** function **below**. When selecting a D3D OSD scheme for a specific program, load the scheme default file.

Mode

Line Interleave

Select this option for better monitor compatibility, particularly for monitors with less bandwidth or less range of horizontal/vertical frequency. Stereoscopic visual quality, however, will be poor since only half the vertical lines are generated.

Page Flipping

Select this option for the best stereoscopic visual quality. Page flipping provides double vertical resolution compared with Line Interleave. The monitor must be able to support the high frequency (at least 100Hz) necessary for this mode.

Refresh Rate

To prevent eye discomfort and fatigue, high refresh rates are preferred. Some monitors, however, may not be able to support a high refresh rate. Consult documentation to make sure that your monitor supports the selected refresh rate; otherwise, your monitor may become unstable, ie.: a blank screen may occur.

Disable Monitor Check

Disables the specification check on the monitor.

Note: Choosing a resolution or refresh rate in excess of monitor specifications may damage the monitor.

Scheme

This field lists the various default schemes that change the appearance of many screen elements simultaneously. Use existing schemes by selecting from the games listed in the drop-down menu and then go to the **main program** field to **browse** for the default settings file supplied with each game for D3D OSD settings. **Click** on **Save** to engage the file with the NVIDIA system. Create and save your own scheme by saving current custom settings. Unwanted schemes may be deleted. You may want to save a scheme that you created for some special situations, such as when you want to use the same settings when playing a certain game or a movie.

Tips for VR!

1. Make sure that the 3D screen objects do not appear either too far apart, or separated into slightly overlapping images. These effects indicate **over- or under-compensation**. **Readjust** the settings to avoid eyestrain.
2. Settings may be adjusted to make some objects appear to hover above the screen area as other objects float below the surface. A ratio of 1:3 to 1:5 of objects above to below is recommended.
3. For race games, use **embossment** to make your car appear above the screen.
4. For first-person shooting games, use **embossment** to make only your hand/weapon appear above the screen.

4. Software Reference

On Screen Display

Enable OSD


Clicking on the check box enables access to the **advanced** box. When selected, this option opens the **D3D On Screen Display**. Use the defined **Hotkey** and adjust the onscreen settings of the 3D glasses and display card while playing Direct 3D games or watching 3D movies.

Advanced

Click on the button to access the **advanced** box to access **hotkey** assignments.

Hotkey

This function assigns hot keys to enable onscreen display or OSD. Select **Enable OSD** then **click** on the **advanced** button. Change the default hot key (CTRL + ALT + O) if it conflicts with hot keys of certain games, video players or Windows programs.

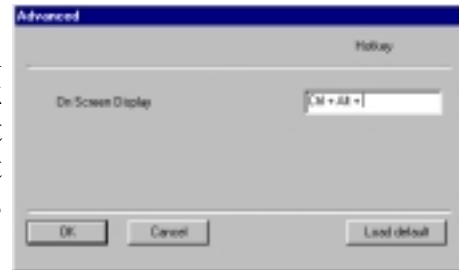

To change the default hot keys

With the mouse cursor in the **Hotkey** box, press the hot key combination of your choice (only **CTRL + ALT + X** key combinations can be defined). Keys that are unavailable for hotkey **X** values include: ESC, ENTER, TAB, SPACEBAR, PRINT SCREEN, or BACKSPACE. Press any other key to complete the combination. For example: to define the hot key combination **CTRL+ALT+D**, having placed the cursor in the box - **press D**.

NOTE: Hot keys will be available only if you selected the **Enable OSD** check box

IMPORTANT: Before enabling *D3D* stereoscopic mode and using the stereoscopic or 3D glasses (ASUS VR-100G), make sure the monitor can support the selected refresh rate (interlaced mode) under the following display scales:

16 bits: 640 x 480, 800 x 600, 960 x 720, 1024 x 768, 1152 x 864

32 bits: 640 x 480, 800 x 600

WARNING! To prevent discomfort and eye fatigue when using stereoscopic or 3D glasses, **DO NOT** use 3D glasses for an extended period of time. Take frequent short breaks to give your muscles and eyes a chance to rest: remove the 3D glasses and then look up and focus on distant objects.

4. Software Reference

Typical D3D OSD Onscreen Game Settings




Beetle Crazy Cup™ is copyright © 2000 by INFORGRAMIES
Original idea and development by XPIRAL™ (Efecto Caos S.L.)

When selected, the **D3D onscreen menu** helps to adjust the settings of 3D glasses and the display card while playing games or watching 3D videos. Typical **D3D OSD** onscreen settings include: **Depth, Embossment, Direction, Background, Foreground, Blind, Brightness, Contrast, and Gamma.**

In most games, use the keyboard **UP** or **DOWN** arrow keys to select a new setting. The **PLUS** or **MINUS** keys move the sliders. To restore the defaults, press the **HOME** key. To close screen settings display, use the **END** key.

D3D/OSD Histogram

The OSD Histogram Chart pinpoints the Z-axis range upon which 3D objects appear as well as how they gather. For example, if the above chart (simulated) was displayed for a car

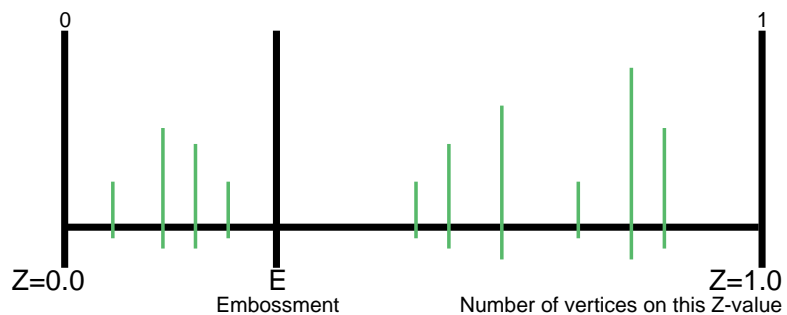

racing game, the vertices to the **left** of the **E line** could be the model of the game player's car, and those objects to the **right** of the **E line** could be the road, houses, other cars or trees in front of the car.

So, with this information, the user may:

- Adjust **embossment** by moving the **E line**.
- Adjust **foreground/background**, thus stretching out the histogram to make objects more evenly distributed.

NOTE: Using the histogram chart requires games using **Direct3D® 6.0** or earlier.

Known Issues on Specific Games

See the ASUS support CD for the latest information: D3DVR.TXT in the WIN9XME folder.

All registered and unregistered trademarks are the property of their respective users. No intended endorsement of these products or games by ASUSTeK COMPUTER INC. and its subsidiaries is intended or implied.

4. Software Reference

OpenGL

VR Effect

Lists all parameters to fine tune the stereoscopic effects for **OpenGL** games.

Enable Stereoscopic Mode

When selected, this enables the stereoscopic mode when using **OpenGL 3D** applications and games with the **ASUS VR-100G 3D Glasses**. These settings are available only with the **Deluxe/TVR** models with **Video-In/TV-Out**, or models with the **ASUS VR-100 Optional Upgrade Kit**.

Eyes

This field records the measure of the distance between both eyes. Adjustment brings objects into focus. **Default: 0**

View Angle

The angle by which your two viewing directions intersect. Adjust this to add more depth to the scene. When set to a too high value, eye discomfort/fatigue may occur.

Embossment

Adjust this to add more to the impression that screen objects are being pulled or seem to pop from the screen. To achieve a better stereoscopic visual quality, set **Embossment** in conjunction with **View Angle**. (See **On Screen Display** later in this section for more details.)

Mode

Line Interleave

Select this option for better monitor compatibility, particularly for monitors with less bandwidth or less range of horizontal/vertical frequency. Stereoscopic visual quality, however, will be poor since only half the vertical lines are generated.

Page Flipping

Select this option for the best stereoscopic visual quality. Page flipping provides double vertical resolution compared with Line Interleave. The monitor must be able to support the high frequency (at least 100Hz) necessary for this mode.

Refresh Rate

To prevent eye discomfort and fatigue, high refresh rates are preferred. Some monitors, however, may not be able to support a high refresh rate. Consult documentation to make sure that your monitor supports the selected refresh rate; otherwise, your monitor may become unstable, ie.: a blank screen may occur.

Disable Monitor Check

Disables the specification check on the monitor.

Note: Choosing a resolution or refresh rate in excess of monitor specifications may damage the monitor.



4. Software Reference

Scheme

This field lists the various default schemes that change the appearance of many screen elements simultaneously. Use existing schemes by selecting from the games listed in the drop-down menu and then go to the **main program** field to **browse** for the default settings file supplied with each game for OpenGL OSD settings. **Click** on **Save** to engage the file with the NVIDIA system. Create and save your own scheme by saving current custom settings. Unwanted schemes may be deleted. You may want to save a scheme that you created for some special situations, such as when you want to use the same settings when playing a certain game or a movie.

On Screen Display

Enable OSD


Clicking on the check box enables access to the **advanced** box. When selected, this option opens the **OpenGL On Screen Display**. Use the defined **Hotkey** and adjust the onscreen settings of the 3D glasses and display card while playing Direct 3D games or watching 3D movies.

Advanced

Click on the button to access the **advanced** box to access **hotkey** assignments.

Hotkey

This function assigns hot keys to enable onscreen display or OSD. Select **Enable OSD** then **click** on the **advanced** button. Change the default hot key (CTRL + ALT + O) if it conflicts with hot keys of certain games, video players or Windows programs.

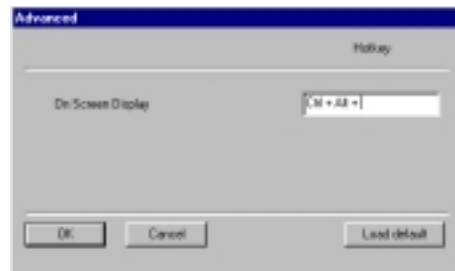

To change the default hot keys

With the mouse cursor in the **Hotkey** box, press the hot key combination of your choice (only CTRL + ALT + X key combinations can be defined). Keys that are unavailable for hotkey X values include: ESC, ENTER, TAB, SPACEBAR, PRINT SCREEN, or BACKSPACE. Press any other key to complete the combination. For example: to define the hot key combination CTRL+ALT+D, having placed the cursor in the box - **press D**.

NOTE: Hot keys will be available only if you selected the **Enable OSD** check box.

IMPORTANT: Before enabling *OpenGL* stereoscopic mode and using the stereoscopic or 3D glasses (ASUS VR-100G), make sure the monitor can support the selected refresh rate (interlaced mode) under the following display scales:

16 bits: 2048x1536 → 1024x768 Stereo Mode

32 bits: 1280x960 → 640x480 Stereo Mode, 1280x1024 → 640x480 Stereo Mode, 1600x900 → 800x600 Stereo Mode, 1600x1200 → 800x600 Stereo Mode

WARNING! To prevent discomfort and eye fatigue when using your stereoscopic or 3D glasses, DO NOT try to use your 3D glasses for an extended period of time. Take frequent short breaks to give your muscles and eyes a chance to rest by taking off your 3D glasses and then looking up and focusing on distant objects.

4. Software Reference

Typical OpenGL OSD Onscreen Game Settings



Unreal Tournament™ is copyright © 1999 by Epic Games, Inc.

When selected, the **OpenGL onscreen menu** helps to adjust the settings of 3D glasses and the display card while playing games or watching 3D videos. Typical OSD onscreen settings include: **Eyes**, **View Angle**, **Embossment**, **Brightness**, **Contrast**, and **Gamma**.

In most games, use the keyboard **UP** or **DOWN** arrow keys to select a new setting. The **PLUS** or **MINUS** keys move the sliders. To restore the defaults, press the **HOME** key. To close screen settings display, use the **END** key.

Known Issues on Selected Games/Applications


See the included support CD for the latest information: OPENGLVR.TXT in the WIN9XME folder.

All registered and unregistered trademarks are the property of their respective users. No intended endorsement of these products or games by ASUSTeK COMPUTER INC. and its subsidiaries is intended or implied.

4. Software Reference

TaskBar Utility

This utility gives convenient access to various features and presets that may be configured in the **Display Properties Menu** directly from the **Windows taskbar**.

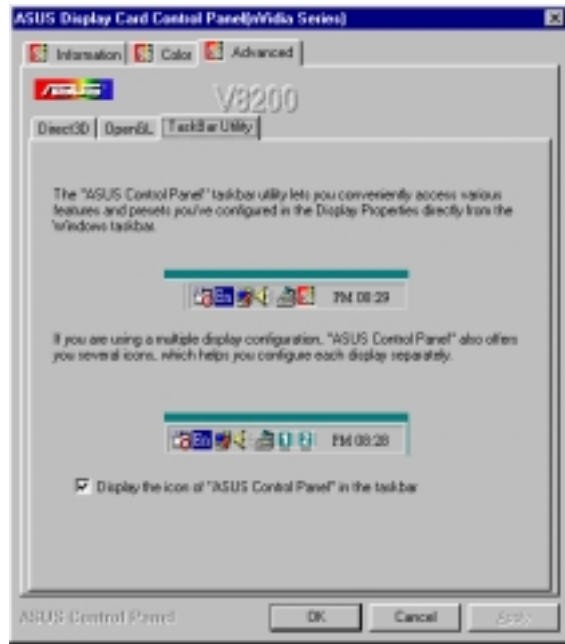


4. Software Reference

Windows Display Properties

The Windows Display Properties is a control panel that helps to make screen adjustments: to the display positions and to color correction, including: brightness, contrast, and gamma. The display properties menu is useful to enable and configure the TwinView display and to make additional property adjustments.

To use **Windows Display Properties**, click the ASUS icon on the taskbar's status area to open the **ASUS Control Panel Menu**. Click **Windows Display Properties**, click the **Settings** tab, and then click **Advanced**.


NOTE: Instead of clicking the ASUS Control Panel icon, you may right-click the Windows 98/2000 desktop, click **Properties**, and then click the **Settings** tab. Then click the **Advanced** button on the bottom right. Click the appropriate tab (with the NVIDIA icon ) to change your display settings.

TIP! You can almost always get more information about a particular option by right-clicking it and then clicking **What's This?**

Device Selection

Select the device/device(s) connected to your card (Analog Monitor, Digital Flat Panel, TV) or click **Detect Displays** to detect the connected device/device(s).


WARNING! Adjusting position or size is a highly dangerous operation. Selecting a value that is beyond your monitor's specification may damage it. **Press ESC to restore your original settings in case of problems.**

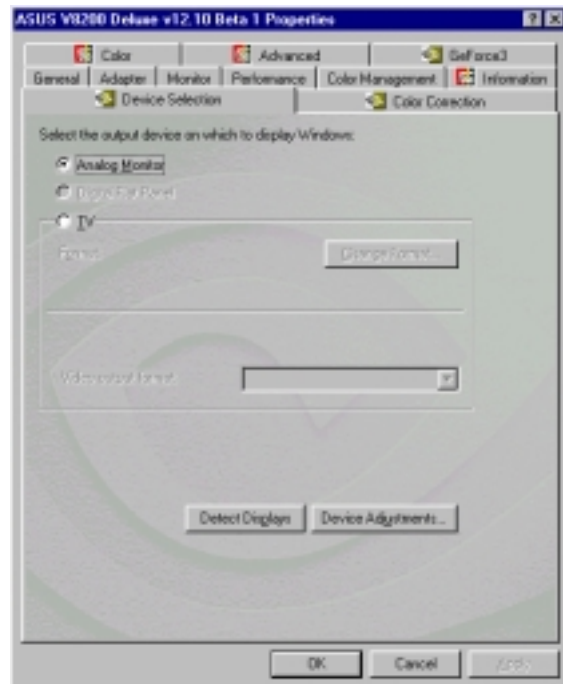

4. Software Reference

Analog Monitor Screen Adjustments

Two submenus permit changes to the position and proper timing mode for your monitor. In **Screen Adjustments**, follow the onscreen instructions to adjust the position of your monitor. For fine adjustments, use the arrows.

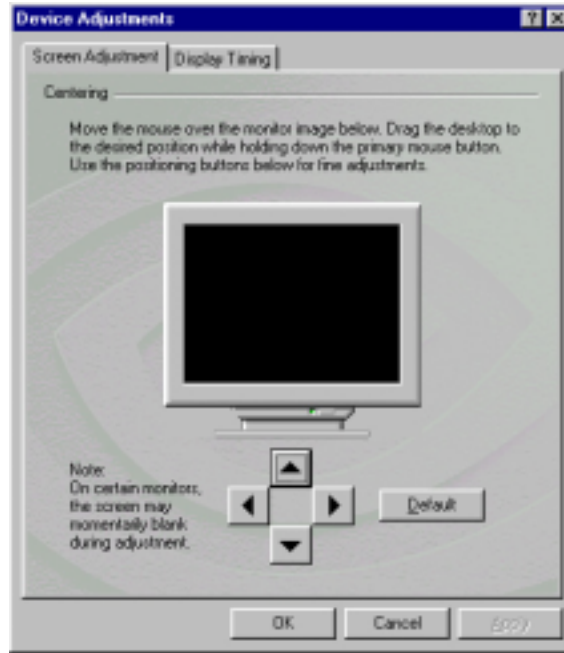

Display Timing

Selects the proper timing mode.

Auto-Detect allows Windows to receive the proper timing information directly from the monitor itself.


NOTE: Some older monitors may not support this feature.

General Timing Formula (GTF)

GTF is a standard used by most new hardware.

Discrete Monitor Timings (DMT)

DMT is an older standard still in use on some hardware. Select this option if your hardware requires DMT.

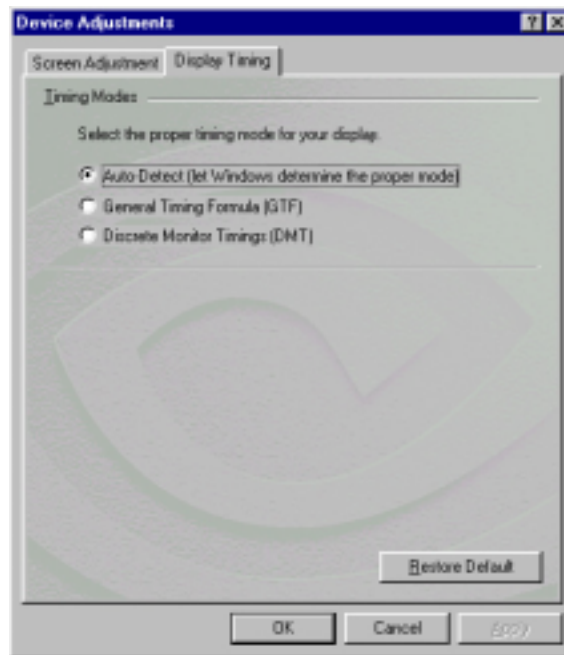

4. Software Reference

Digital Flat Panel

The following options determine the placement of the image on the flat panel display when running at resolutions lower than the maximum resolution supported.


Use display adapter scaling

Adapter automatically scales the appearance of the display on the monitor. (default)

Centered output

Centers the image on the flat panel and does not adjust the scale.

NOTE: This function is only available with DVI/2V1D cards.

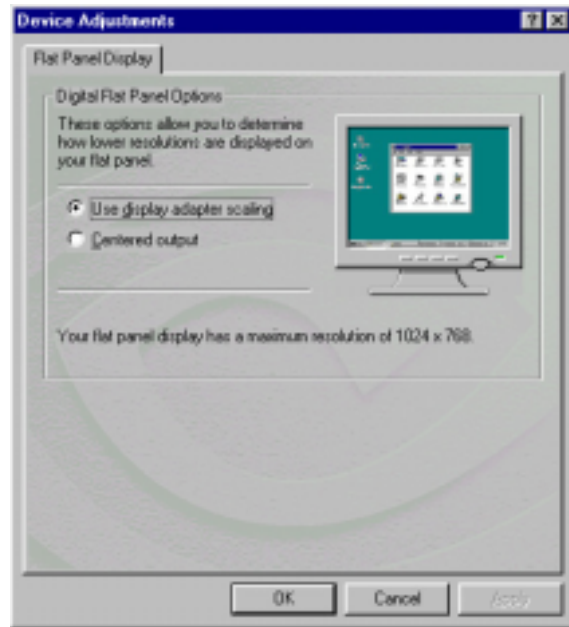

4. Software Reference

TV

Change Format

Opens a window that specifies a particular TV output format.

NOTE: This function is only available with T/Deluxe Combo cards.

Video output format

This field specifies the type of output signal sent to the TV. If the correct connector cable is connected, **S-Video out** will generally provide a higher quality output than **Composite video out**. Specify **Auto-select** to make the system determine the output signal.



Change TV Format Window

Selects the TV/video output format based on local country standards.

NOTE: If your country is not in the list, find out which type of TV/video output format is most commonly used locally and select it; ie.: PAL-D or NTSC-M.




Device Adjustments

Screen Positioning

Selects the TV/video output format based on the four quadrants indicated by the arrows. Click on the arrows to reposition output on the TV monitor.

Brightness / Flicker Filter / Contrast

These sliders help calibrate the visual output of the display card. Any changes to color settings are shown immediately on the monitor.

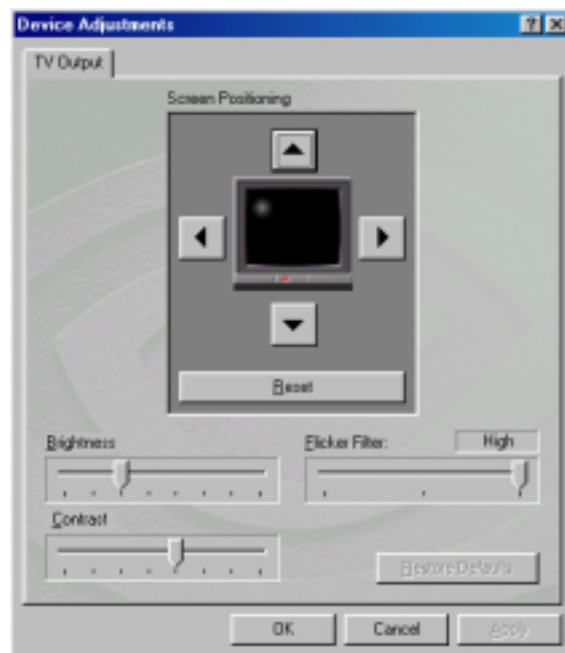

4. Software Reference

Color Correction

This menu enables color adjustments like **brightness**, **contrast**, and **gamma** values for each or all of the RGB colors on the desktop.

Digital Vibrance

This setting controls the color separation and intensity of the Windows desktop.

NOTE: Increasing the levels may result in bold, dynamic visuals with sharp and balanced colors.

Active Color Channel

This setting coordinates all channels at once (**All channels**) or allows for adjustment of individual channels (**Red**, **Green**, or **Blue**).

Brightness / Contrast / Gamma

These sliders help calibrate the visual output of the display card. Changes to color settings are shown immediately on the monitor.

Automatically apply these settings at startup

Selecting this option will automatically restore the color adjustments when Windows is restarted.

NOTE: If the PC is running on a network, the color will be adjusted after you have logged on to Windows.

Custom color settings

This field lists the new settings. These settings can be used to change the appearance of many screen elements simultaneously. Create and/or save current settings, or delete unwanted settings. A setting may be created, saved and reused for special situations.




4. Software Reference

GeForce3

The **GeForce3** tab displays information about the graphics card, computer system and driver versions; it also accesses extra features and supplies an Internet link for drivers, product updates and news.

Additional Properties

Click on the Additional Properties button to enter five submenus to configure the various functions of this card.

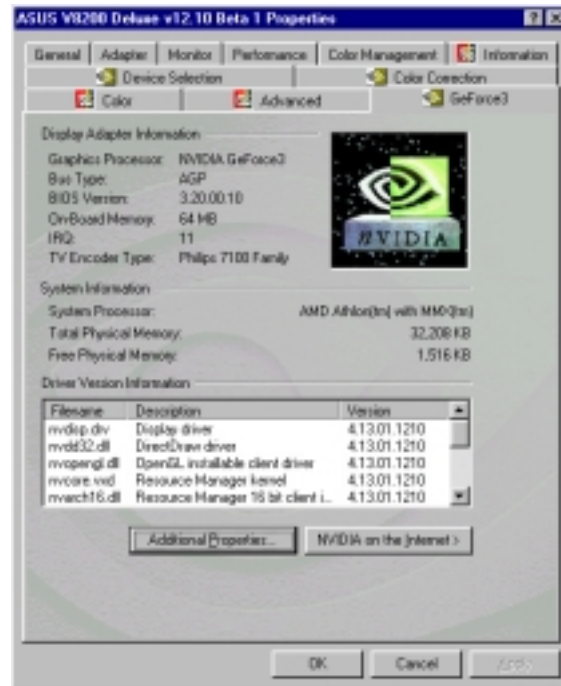

3D Antialiasing Settings

Antialiasing is a technique used to minimize the rough rendering of artifacts, eliminating the “staircase” or “jagged effect” seen along the edges of 3D objects. These controls select the degree to which antialiasing is used in **Direct3D** and **OpenGL** applications.

Allow applications to control the antialiasing mode:

Some 3D applications that support antialiasing automatically optimize control of this mode; it is possible to select the antialiasing mode manually.

Manually Select Anti-aliasing Mode

Off (no antialiasing): Disables antialiasing in 3D applications. Select Off if you require maximum speed performance in your applications.

2x: Enables antialiasing using the 2x mode. Select this for improved image quality and high performance in 3D applications.

Quincunx Antialiasing™: Enables a patented antialiasing technique available in the GeForce3 GPU series. *Quincunx Antialiasing™* offers the quality of the slower 4x AA mode at very near the performance of the faster 2x AA mode.

4x: Enables the antialiasing using the 4x mode. Select this for the highest possible image quality at the expense of some performance drain in 3D applications.



4. Software Reference

Direct3D Settings

Performance and Compatibility Options

Enable fog table emulation

Some older games do not query D3D hardware capabilities correctly and so expect table fog support. Choosing this option will ensure that such games will run properly.

Adjust Z-buffer depth to rendering depth if unequal

This option forces the hardware to automatically adjust the depth of its Z-buffer to the precise depth that the application requests. Keep this option enabled, unless the work absolutely requires a specific Z-buffer depth.



Enable alternate depth buffering technique

This option lets the hardware use a different mechanism for depth buffering in 16-bit applications. Enabling this setting can produce higher quality rendering of 3D images.

Display logo when running Direct3D applications

This option lets you display the NVIDIA logo in the lower corner of the screen while running Direct3D applications.

Mipmapping

Mipmap detail level

This option lets you adjust the Level of Detail (LOD) bias for mipmaps. A lower bias provides better image quality while a higher bias augments performance. Choose from five preset bias levels.

PCI Texture Memory Size

NOTE: This setting applies only to PCI display adapters or to AGP display adapters running in PCI compatibility mode.

This option sets the amount of system memory for texture storage. Clicking the “up arrow” increases memory size while clicking the “down arrow” decreases the size of system memory used for textures. The maximum amount of system memory for texture storage depends on the amount of physical memory installed on the system.

Custom Direct3D settings

This option lets you create or delete custom settings or “tweaks” you have saved.

4. Software Reference

More Direct3D

Texel Alignment

These values define the position of texel origin. The default values conform to the Direct3D specifications. Some software may expect texel origin to be defined elsewhere. The image quality of such applications will improve if the texel origin is redefined. Dragging the slider leftward positions the texel origin closer to its upper left corner and moving the slider rightward positions it closer to the center.

Range: 0 to 7, default: 3.



4. Software Reference

OpenGL Settings

Performance and Compatibility Options

Enable buffer region extension

This option permits the drivers to apply the OpenGL extension: `GL_KTX_buffer_region`.

Allow the dual planes extension to use local video memory

This option permits the use of local video memory when the `GL_KTX_buffer_region` extension is enabled.

Use fast linear-mipmap-linear filtering

This option permits increased application performance at the expense of some image quality loss. In many cases, the loss of image quality may not be noticeable.

Enable anisotropic filtering

This option allows OpenGL to use anisotropic filtering for improved image quality.

Disable support for enhanced CPU instruction sets

This option disables driver support for enhanced 3D instruction sets by certain CPUs.

Default color depth for textures

This option determines whether textures of a specific color depth should be used by default in OpenGL applications. **Options** are: **Use desktop color depth (default)**, **Always use 16 bpp**, and **Always use 32 bpp**.

Buffer flipping mode

This setting determines the buffer flipping mode for full-screen OpenGL applications. **Options** are: **Auto-select (default)**, **Use block transfer**, and **Use page flip**.

Vertical sync

This setting specifies how vertical sync is handled in GL. **Options** are: **Always off**, **Off by default**, and **On by default (default)**.


Use up to x MB of system memory for textures in PCI mode

This option sets the amount of system memory for texture storage. Clicking the up arrow increases the memory size while clicking the down arrow decreases the size of system memory for textures. The maximum amount of system memory for texture storage depends on the physical memory installed on your system.

NOTE: This setting applies only to PCI display adapters or to AGP display adapters running in PCI compatibility mode.

Custom OpenGL settings

This option lets you create or delete custom settings or “tweaks” you have saved.

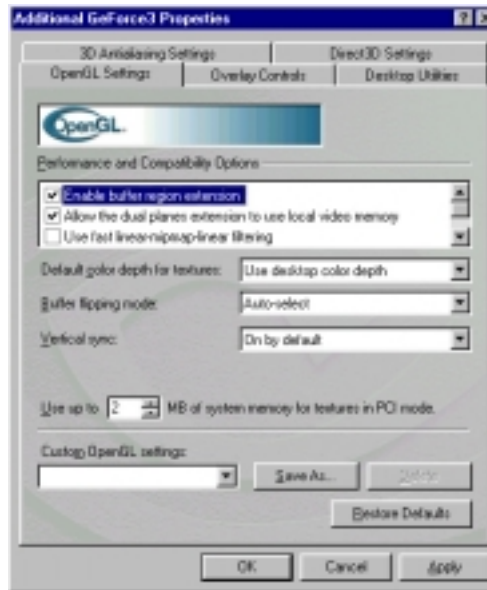

4. Software Reference

Overlay Controls

Brightness / Contrast / Hue / Saturation

Four sliders calibrate the brightness, contrast, hue, and saturation output of the card. Use this to adjust the quality of video or DVD playback on your monitor. Dragging a slider to the left decreases the level; moving to the right increases the level. The number at the right of each slider displays the brightness scale.

Range: 0% to 200%, default: 100%); Contrast (0 to 200%, default: 100%); Hue (-180° to 180°, default: 0°), and Saturation value (0% to 200%, default: 100%).



Enable video overlay zoom

This option enables the zoom controls to allow you to zoom in on a specific area of the video output screen.

NOTE: (when enabling overlay zoom): Video players that are not able to detect the presence of Video Mirror may not update the zoom factor immediately while displaying a still frame.

Select screen region to zoom

This option lets you select the region on the video playback to zoom in or out.

Zoom control

This option lets you zoom in or out on the selected portion of the video playback screen.

Check here if you are having problems with your TV tuner

This option, when selected, forces the overlay software to use busmastering. It is recommended that you leave this option cleared unless you experience problems with video playback, such as image corruption or no video image at all.

NOTE: You can only access Overlay Controls while you are playing back videos, for example, .AVI files or DVD movies on your computer.

4. Software Reference

Desktop Utilities

Display the Quick Tweak icon in the taskbar


This option **adds** the NVIDIA Quick Tweak icon to the Windows **taskbar**.

NOTE: In the **TwinView Extended Desktop** mode, an **extra check box and a button** appears on the Desktop Utilities dialog: **Enable Desktop Manager and Desktop Manager Configuration**. Click this button to access the *Desktop Display Manager* setup menus.



Using the Quick Tweak icon

Right click the **NVIDIA taskbar icon** to display a **popup menu** of options, including OpenGL, Direct3D or Color settings. The menu also contains items for restoring default settings. **Left click** on the icon twice, and the **Display Properties Menu** appears.

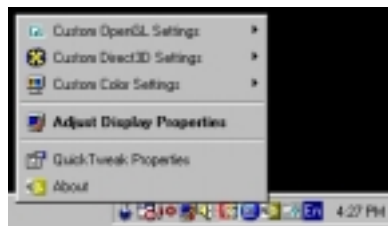

NOTE: An additional option appears on the popup menu to access the *Desktop Display Manager* setup menus.


4. Software Reference

Desktop Display Manager

In the TwinView Extended Desktop Mode, this Display Manager sets up the PC to run one or more programs on one or both monitors or desktops. Among others, it also allows you to undertake program-management features, such as restoring application windows to their last-used position.



Setting Up Desktop Display Manager Properties

Make sure the applications the are going to run using the Desktop Display Manager are already open. To set **Display Manager** properties, check the box, **Enable Display Manager** and click the **Desktop Manager Configuration** button. The Desktop Display Manager dialog box opens.

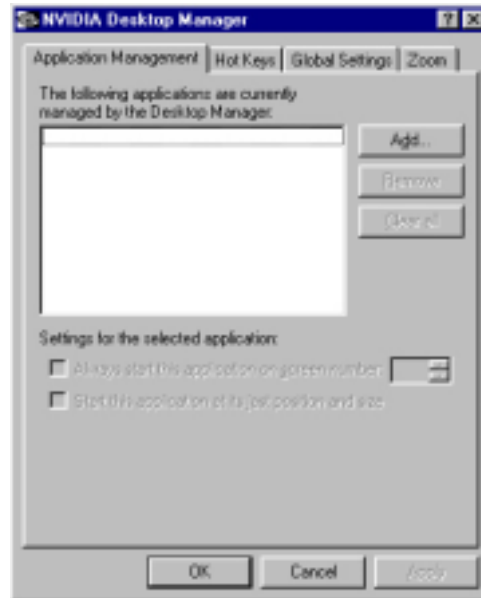

Application Management


Application Management adds program applications to Desktop Display Manager. Click the **Add** button on the **Application Management** tab. Program applications currently open appear in the **New Application** box. Select the program you want to add, then click **OK**. The program appears in the **Application Management** window. Repeat this step for each program that you want to add to the Desktop Display Manager.

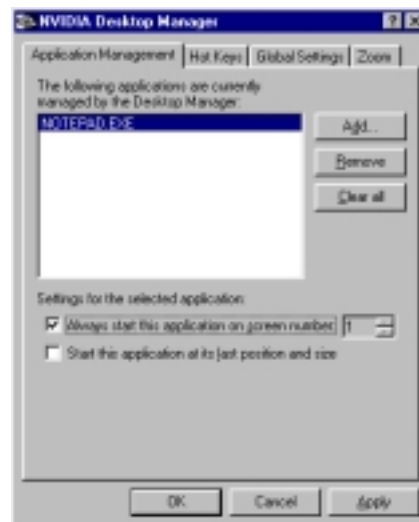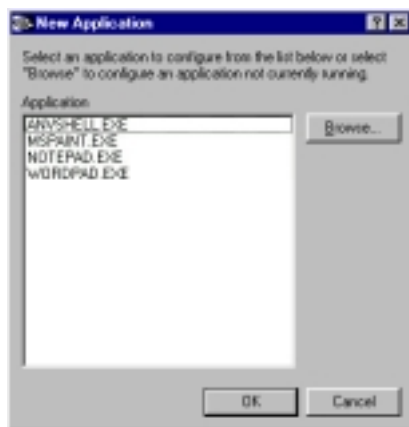

A variety of settings are available in **Desktop Display Manager**. Check: **Always start this application on screen number** selects the display or monitor to use when starting up the program. Check: **Start this application at its last position and size** restarts the program at its last position and sizes it to the same size as it was when last closed.

4. Software Reference

To display the **Desktop Display Manager** menu from any program application that has been added, **right-click** the title bar of the open program. (The title bar is a horizontal bar at the top of a window that shows the name of the document or program.)

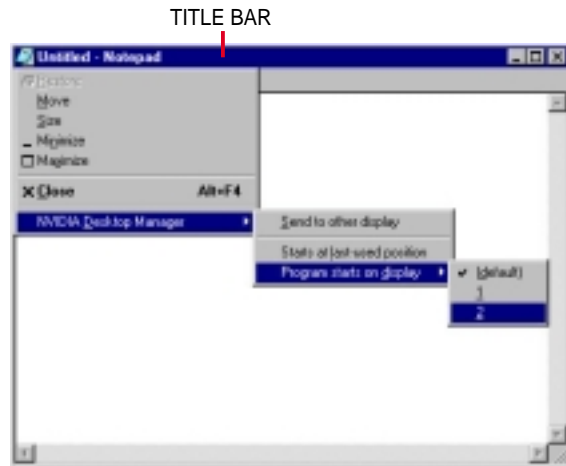

Hot Keys

Hot Keys may be configured with different key combinations and assign them to actions like: **moving** active windows to another monitor, or moving open windows to a separate monitor. Default key combinations for each action are:

Move the active window to another monitor: ALT + 1

Move all windows to another monitor: ALT + 2

Gather all windows to one monitor: ALT + 3



Global Settings

This field specifies settings that apply to all applications running under **Desktop Display Manager**.



4. Software Reference

Zoom

This feature enables a magnified view of a screen region under and around the mouse cursor. The zoomed view appears on the monitor on which the mouse is *not* pointing.

Enable zoom feature

This control turns **on** the **zoom** function. The default setting is selected.

Hot keys to control zoom features

This feature specifies hot key combinations other than the defaults listed on the previous page. Press any valid key, including the **F# function** keys. Keys unavailable for hotkeys are: ESC, ENTER, TAB, SPACEBAR, PRINT SCREEN, or BACKSPACE.



Zoom update frequency (updates per second)

This setting updates the “refresh” frequency of the magnified view in number of times per seconds (*default: 8*; it can be set from **1** to **100** times per second). Normally, the magnified view is updated whenever the mouse cursor is moved and is updated at a fixed interval when the mouse cursor is still.

Delay before switching zoom monitor (msec)

This field controls the time delay in milliseconds (*default: 500*; it can be set from **0** to **1000 milliseconds**) before the zoomed view switches monitors when you move your mouse cursor from one monitor to the other. Change the setting to **0** for instant switching of zoom windows.

4. Software Reference

Using the ASUS Utilities



ASUS Tweak Utility

WARNING! Use the ASUS Tweak Utility with extreme caution and only if you are well acquainted with your display card. Using this inappropriately may damage your card, its components, and your system.

To run the ASUS Tweak Utility, click **Start** and point to **Programs, Asus, Tweak-Utilities**, and then click **Tweak**.

Timing Adjustment

Timing Adjustment lets you adjust the working frequency of the graphic engine and video memory.

Use tweak settings on next startup

Selecting this allows you to use your settings when Windows starts.

Graphics Speed

Engine

Lets you adjust the working frequency of the graphic engine

Memory

Lets you adjust the working frequency of the video memory.

Load default

Restores the settings to their defaults.

2D Test

Lets you test your settings.



4. Software Reference

Tweak Safe Mode Recovery


Timing Adjustment (Safe Mode) lets you restore the working frequency of the graphic engine and video memory to their factory default settings. This mode is used when you encounter problems when starting or restarting Windows using your customized tweak settings.

Using Tweak Safe Mode Recovery

1. Restart Windows in safe mode. To start Windows in safe mode, hold the F8 key until the Windows Startup Menu appears. For some machines and Windows 98, you can use CTRL to bring up the Startup Menu. Enter the number for **Safe mode** and then press ENTER.
2. In Windows, click **Start** and point to **Programs, Asus, Tweak Utility**, and then click **Tweak Safe Mode Recovery**.
3. The **ASUS Tweak Safe Mode Properties** box appears. Click the appropriate settings.

Timing Adjustment (Safe Mode)

Select the **Clear tweak settings and use factory default** box to change back the timing adjustment settings to their factory defaults and then click **OK** to restart Windows properly.

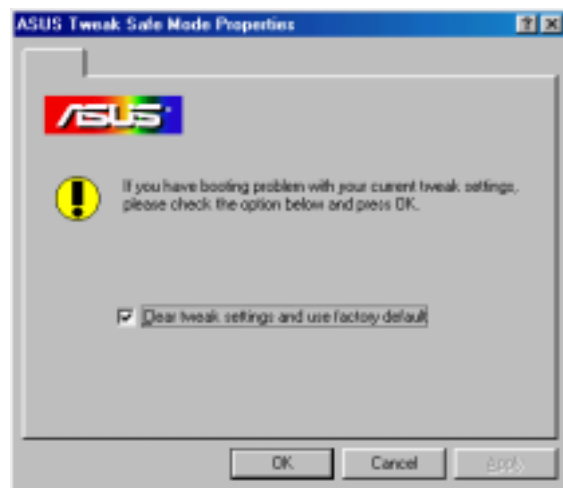

4. Software Reference



ASUS VideoSecurity

Windows 98 Only

NOTE: The ASUS VideoSecurity utility can only be used with models with Video-In/TV-Out.

ASUS VideoSecurity lets you detect intruders into your system and environmental changes and monitor a specified location or any incoming visitor. If VideoSecurity detects any deviation from the norm that you set, it may give an error message or not. Regardless of any messages, VideoSecurity will record:

- Any information about the monitored activity and then store these to an event log file. If you have already installed Microsoft Access 97 or later, you may use these event log data and export it as an Access database for further data management and processing.
- The last two detected snapshot image files from the video captured stream (stored as bitmap format). Any image processing or editing software can then be used to view, modify, or distribute them.

Limitations

Because of differences in hardware sensitivity, VideoSecurity may not completely detect all possible errors. Before you execute VideoSecurity, there are some limitations you have to understand so that you can appropriately use it.

- Due to changing temperatures, the captured image of some CCDs will be twisted, which may give a wrong detection.
- If the features (e.g., color, luminance) of the object are similar to that of background, the object may not be detected clearly.
- The CCD cannot capture the object smoothly and immediately when an object moves too fast.

VideoSecurity is designed for the widest environments possible and error conditions, therefore it is necessary to tune the parameters in VideoSecurity Setup Wizard to get the best detection results.

Setup Wizard

Setup Wizard guides you through setting up the VideoSecurity features.

1. To open Setup Wizard, click the **Start** button, and then point to **Programs, ASUS Video Security**, and then click **Setup Wizard**. The **Video Security Setup Wizard** dialog box appears.



4. Software Reference

NOTE: The following descriptions are only for selected features of the ASUS VideoSecurity utility. For a full description of the features described in this manual and other features, refer to the ASUS VideoSecurity Online Help (HTML) format included with your support CD. You may also click the **Help** button to open the online help file.

Main Window

VideoSecurity Running Style

- **Normal Window** is the default style, that is, VideoSecurity will function as a standard Windows program.
- **Always on Top** is like a Normal Window except that the main window and control panel is shown always on top of other programs or utilities. You may right click to enable or disable this function at the main window anytime.
- **Minimize on Tray** lets you hide the main VideoSecurity window. This is useful when you don't want anyone to know you are monitoring. When this option is selected, the VideoSecurity icon will appear on the taskbar in the lower-right corner of your screen. Whenever VideoSecurity detects a problem, it will run. You may also run VideoSecurity by clicking the icon.

VideoSecurity Working Directory

The **VideoSecurity Working Directory** is the folder where the utility stores its temporary working and log files. Default is C:\VIDEOSEC. The directory is user-configurable. When VideoSecurity is ran, a sub-directory will automatically be created under the main directory, using the current date and time as the folder name, for example, "1999.11.30_12.30.20" means that VideoSecurity was started on 30 November 1999 at 12:30:20 PM.

IMPORTANT: Do not change the working folder's name while VideoSecurity is running. Otherwise, a fatal runtime error will occur.

VideoSecurity Detecting Region

Detects all visible area when watchdog function is on

This sets the scan rate. Default is 2 frames/sec. The higher the scan rate, the more accurate is the detection. Higher rates, however, entails a higher CPU usage. Do not use a high rate when you plan to use VideoSecurity while using other applications.



Detects only the area defined by the user when watchdog function is on. Feature will take effect only when VideoSecurity runs the next time

4. Software Reference

Sensibility

Currently, only one option is available to set the image format




This is an important parameter when setting up VideoSecurity. Your environment may change often but VideoSecurity is concerned only when there is a change in the environment. Make sure that you select a suitable sensitivity for your environment.

Define Tracing Procedure


VideoSecurity not only detects errors or problems in your card but also monitors or detects an intrusion.




Use this to stop tracing or to choose the error processing method to use while tracing. This box appears when an error occurs.

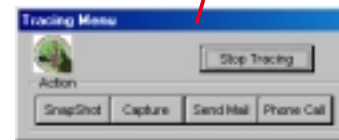

Error Processing Procedure

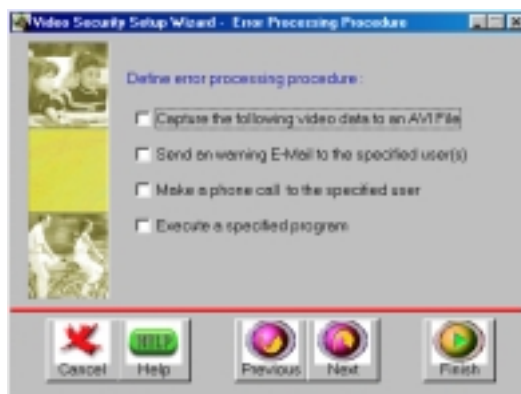

Stop Detecting Setting

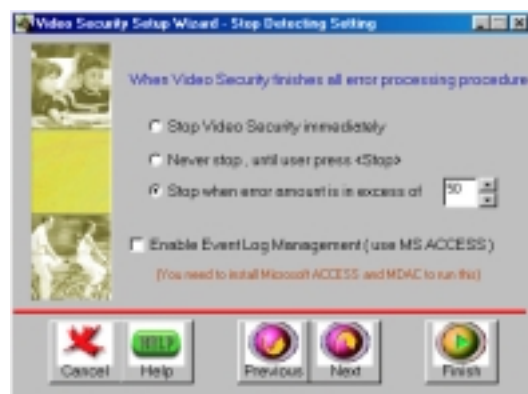

4. Software Reference

Running ASUS VideoSecurity

The image shows the ASUS VideoSecurity software interface and its settings dialog box. The main control panel features a status bar with system information and two buttons: 'Start' and 'Setup'. The settings dialog box includes 'Setup Wizard', 'Set Region', and 'Video Source' options.

Annotations for the main control panel:

- Opens online help (points to the '?' icon)
- Exits VideoSecurity (points to the 'X' icon)
- Minimizes VideoSecurity to the status tray (Click ASUS VideoSecurity icon on the status tray to display the VideoSecurity control panel) (points to the '-' icon)
- Main Control Panel (points to the entire interface)
- Click to start detecting (points to the 'Start' button)
- Click to open the VideoSecurity Setting dialog box (points to the 'Setup' button)

Annotations for the ASUS Video Security Setting dialog box:

- Starts the Setup Wizard (points to the 'Setup Wizard' button)
- Lets you define a region with which VideoSecurity will monitor for errors or intrusion. (points to the 'Set Region' button)
- Lets you adjust the video source parameters, such as **Color**, **Video Connector**, and **Video Standard** (points to the 'Video Source' button)

Shortcut Keys

- | | |
|-----|------------------------------------------------|
| ESC | Exits VideoSecurity |
| F1 | Opens Online help |
| F2 | Toggles VideoSecurity / Stop Watchdog function |
| F3 | Opens Setup menu |
| F4 | Shows error log box |

4. Software Reference



ASUS Live Video

NOTES

1. ASUS Live Video can only be used with models with a Video Decoder (Deluxe Combo) and monitors or monitor drivers that are designed for I2C bus control.
2. ASUS Live Video supports Windows 9x/ME, Windows NT 4.0, and Windows 2000. For Windows NT/2000, however, the ASUS capture driver for NT/2000 must be installed first before opening ASUS Live Video (see **Install Video for Windows Capture Driver** earlier in **3. Software Setup**).
3. With a Deluxe Combo graphics card, ASUS Live Video only supports **Extended Desktop** mode if **TwinView** is enabled.

ASUS Live Video can be used to:

1. View images using your monitor as screen from traditional consumer devices, such as videocassette players, camcorders, digital cameras, and laser disc players through the onboard RCA or SVHS VIDEO-IN connectors.
2. Capture live motion video up to 30 frames/second (minimum system requirement: Pentium II/266).

NOTE: You should already have installed DirectX 7 or later to use ASUS Live (see **3. Software Setup | Install DirectX**)

Running ASUS Live Video

To run the utility, click **Start** and point to **Programs** and then **ASUS Live** and then click **ASUS Live**.

You may also run ASUS Live by clicking or right-clicking the ASUS Control Panel icon (see **4. Software Reference | ASUS Control Panel**) on the taskbar's status area to display the ASUS Control Panel, pointing to **ASUS Live Video**, and then clicking it.

Uninstalling ASUS Live Video

To uninstall the software, click **Start** and point to **Programs** and then **ASUS Live** and then click **Uninstall**. You may also uninstall the software using the **Add/Remove Programs Properties** dialog box at the **Windows Setup** tab. See Windows online help for more information on removing a Windows component.

4. Software Reference

ASUS Live Control Panel

Live Mode

(Click **Capture** to switch to Capture Mode)

Click the preferred video connection (Composite, S-Video, TV Tuner) to change a current connection.

Click here to open the ASUS Live Pre-Recording Setting dialog box.

Shows/hides the **Video Source Option (F9)** (see next page)



Keep ASUS Live Always On Top
Zoom In/Out ASUS Live Control Panel
Minimize ASUS Live Control Panel to taskbar
Exit

Click here to change the video standard (NTSC-M, NTSC-N, NTSC-4.43, PAL-BGHI, PAL-4.43, PAL-M, PAL-N or SECAM)

Click here to change the window size for viewing [160 x 120, 176 x 120, 340 x 240, 352 x 240 (default), 640 x 480, 720 x 480 or Full Screen].

Opens the **About ASUS Live** (ASUS Live and Capture Driver version number) window

Opens a drop-down box to let you set **Video Format, Video Source, Tuner Setting, and Tuner Edit**

Capture Mode

(Click **Live** to switch to Live Mode)

Click the preferred video connection (Composite, S-Video, TV Tuner) to change a current connection.

Click here to open the ASUS Live Pre-Recording Setting dialog box.

Click an image to view it with the associated image viewer or application (a pop-up window opens to show the path and filename of the selected image). Right-click an image to **View, Save As,** and **Delete** that image.



Click here to change the video standard (NTSC-M, NTSC-N, NTSC-4.43, PAL-BGHI, PAL-4.43, PAL-M, PAL-N or SECAM)

Opens the ASUS Video Format dialog box to change the capture **Image Dimensions** [88 x 60, 176 x 120, 352 x 240 (default), 704 x 240, 704 x 480, 160 x 120, 320 x 240, 640 x 240, 640 x 480 or Full Screen], **Image Format** [8 bit Palettized, 16 bit RGB, 24 bit RGB, UYVY, and ASUS Video 2.0 (default)], and/or **ASV2 Settings (Quality Level)** [0 - Best Compression, 1, 2, 3 (default), 4, 5 - Normal Quality, 6, 7, 8, 9 - Best Quality].

Opens a drop-down box to let you set capture format size, video compression, pre-recording settings, among others

4. Software Reference


Always On Top



The **Always On Top** option is provided for users who may wish to continue watching VCD/DVD/TV programs or want to have the display screen visible while doing other tasks, such as when downloading files from the Internet or word processing. To keep your display screen always on top of other programs, right-click the display screen and then click **Always On Top**. Position the screen where it will not interfere with your other tasks.

Video Source Option

When first using ASUS Live, you must set up the video source. By clicking the **Video Source Option (F9)** button (*hotkey: F9*) on the ASUS Live Control Panel, you can show or hide the video source setup screen.

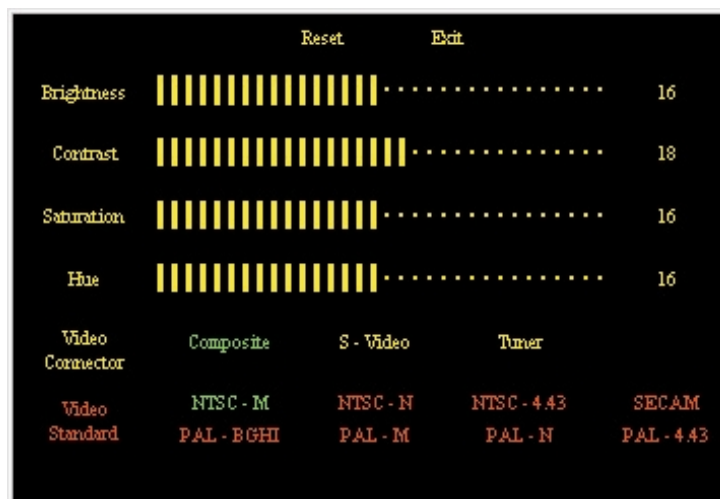

Use your mouse/pointing device or the Up or Down Buttons on the ASUS Live Control Panel or the UP and DOWN arrow keys on your keyboard to select Video Connector and then the Left and Right Buttons or the LEFT and RIGHT arrow keys to set your video connection (*Composite, S-Video, or Tuner*) or video standard [*NTSC-M, NTSC-N (not supported under Windows 2000/NT 4.0), NTSC-4.43, PAL-BGHI, PAL-M, PAL-N, PAL-4.43 or SECAM*]. Click or select **Reset** to set the settings back to its default. Click or select **Exit** to close the Video Source Option window.

4. Software Reference

NOTES

1. Users of the PAL D/K models should select PAL-BGHI for the Video Standard.
2. NTSC-N is not supported under Windows 2000/NT 4.0.

If desired, you may adjust the Brightness, Contrast, Saturation, and Hue of your display by using the video source setup screen. Use the Up or Down Buttons on the ASUS Live Control Panel or the UP and DOWN arrow keys on your keyboard to select the desired option and then the Left and Right Buttons or the LEFT and RIGHT arrow keys to make the desired adjustments.


Click again the **Video Source Option (F9)** button on the ASUS Live Control Panel to exit from the video source option screen.

ASUS Live Video Modes


ASUS Live Mode has two execution modes, namely, **Live Mode** and **Capture Mode**.

Live Mode

Live Mode lets you view live video. Under this mode, you may adjust the display screen size with your mouse, or view in full-screen mode, or set live video as wallpaper to display it.

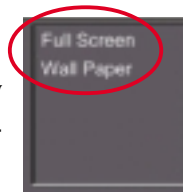

To change video source settings, click the **Setup** button on the ASUS Live Control Panel.

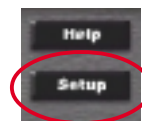

NOTES


1. Currently, Live Mode does not work under Windows NT 4.0. Live Mode requires at least Direct Draw 6, which Windows NT 4.0 does not support.
2. Before using the **Wall Paper** option, make sure that the **View as Web Page** option of the Active Desktop setting is not selected (*see Start – Settings – Active Desktop – View as Web Page*).

Capture Mode

Capture Mode lets you capture and store images into your computer. It has three capture options: **SnapShot**, **Frame Recording**, and **Video Recording**. Video Recording adds an auto-timer recording function that allows you to schedule your video recording (*see Auto Video Recording Setting* later in this section).



Captured images are shown on the Preview Files window of the ASUS Live Control Panel. Click an image to view it with the associated image viewer or application (a pop-up window opens to show the path and filename of the selected image). Right-click an image to **View**, **Save As**, and **Delete** that image.

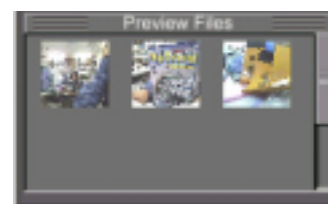

To change video capture settings, click the **Setup** button on the ASUS Live Control Panel.



4. Software Reference

Video Capture

IMPORTANT: It is the intent of ASUS that this product be used in full compliance with the copyright laws of your respective and other countries and that prior permission be obtained from copyright owners whenever necessary.

Windows 98

When you install the Windows 98 Driver of your ASUS graphics card (only models with the VIDEO-IN connector), the video capture driver will automatically be installed on your system. This video capture driver follows Microsoft Video for Windows standard and can open **up to a capture window size of 704 x 480**. It can be used with some applications that use video capture as an option, such as video conferencing, net meeting, or digital video authoring applications.

IMPORTANT: You must enable the DMA transfer mode of your hard disk (EIDE HD) to get the maximum data transfer capability (**704 x 480, 30 frames/second**) during the video capture process. Otherwise, your system may become unstable.

Windows 2000/NT 4.0


The video capture driver for Windows 2000/NT 4.0 is not automatically installed when you install the display drivers of your ASUS graphics card.

To install, insert the CD installation disc into your CD-ROM drive, click **Drivers**, and then click **Install Video for Windows Capture Driver** (see 3. Software Setup | **Install Video for Windows Capture Driver**).

Enabling DMA Transfer Mode

NOTE: The **How to Get Maximum Capture Performance** dialog box will tell you how to enable your hard disk's DMA transfer mode to get the best capture performance. Simply follow the on-screen instructions to enable DMA mode. Otherwise, do the following:

1. Click **Start**, point to **Settings**, and then click **Control Panel**.
2. Double-click the **System** icon. The **System Properties** dialog box appears.
3. Click the **Device Manager** tab and then click the plus sign next to **Disk drives**, and then double-click your hard disk. The hard disk's **Properties** box appears.
4. Click the **Settings** tab and then select the **DMA** check box under **Options**.

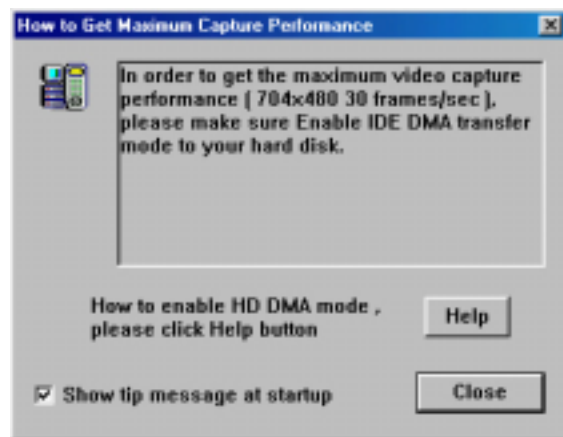

4. Software Reference

Capturing Images

You must be in capture mode to capture images. To do this, click the **Capture Mode** button on the ASUS Main Panel.

NOTE: ASUS Live will automatically detect and warn you if the capture driver installed in your system is not compatible with ASUS Live.

Video/Capture Setting

1. Click **Setup** and point to and then click **Capture Basic Setting** to adjust the basic video capture settings, such as **Capture Image Dimension and Format**, **Capture CODEC selection**, and **Capture Audio Format and Attribute**.




Under **Capture Image Dimension and Format**, select the **Image Dimensions**, **Image Format**, and **ASV2 Settings** of your choice.




NOTE: Windows 2000/NT 4.0 supports only the UYVY image format.

Under **Capture CODEC selection**, select the video compression of your choice for your captures.

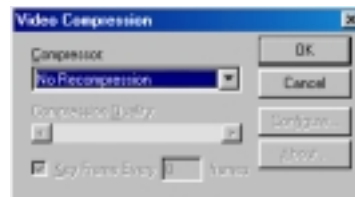

Under **Capture Audio Format and Attribute**, select the audio **Format** and audio **Attributes** setting of your choice. This setting depends on whether you have audio set on your system.

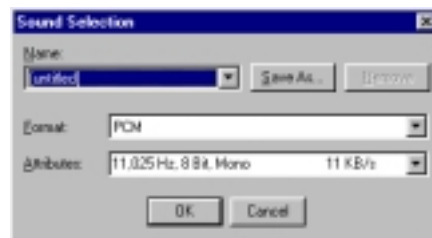

4. Software Reference

Preallocate disk space: If you have limited space on your hard disk, you may want to limit the capture file size to a certain size. To do this, click **Preallocate disk space** and enter the desired maximum file size.

Don't ask before starting capture: This lets you start capture without the dialog box prompt.

You are now ready to capture video images.


Capture Tip: See **Enabling DMA Transfer Mode**

Adjust Source: This lets you select the video connection and video standard to use in the capture. It also lets you adjust the *Brightness*, *Contrast*, *Saturation*, and *Hue* of your images.

Snapshot Setting

1. Click **Setup** and point to and then click **Video SnapShot** to select your **Capture Picture Format** (*default: 24 bit*), **Image Setting** and other settings.

Under **Image Setting**, you may set the desired **Image File name** and path (*default: C:\CAPTURE.BMP*) and for the filename to be consecutively numbered (**Store image use consecutive numbered filename**).

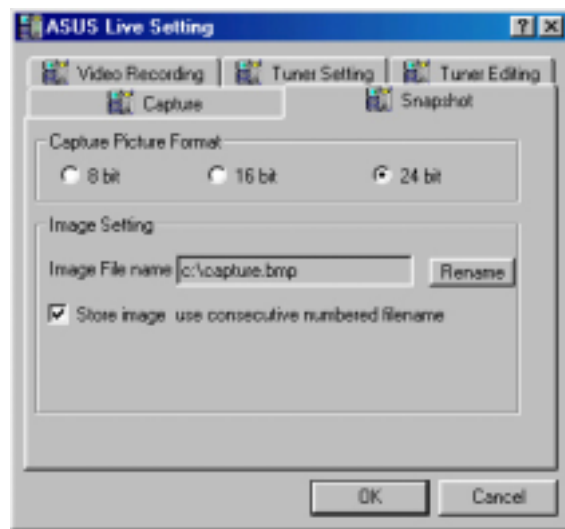

You are now ready to capture video images.

Manual Video Recording Setting

1. Click **Setup** and point to and then click **Manual Recording** to select the video recording settings, such as the **Frame Rate (fps)** (*default: 30*), **Maximum Capture Time** (*default: 10 seconds*) and **File name** and path (*default: C:\CAPTURE.AVI*).




You are now ready to capture video images.

4. Software Reference

Scheduled Recording Setting (Windows 98/ME only)

NOTE: For Windows NT/2000, refer to **4. Software Reference | Auto Recording**.

1. Click **Setup** and point to and then click **Scheduled Recording** to select the live pre-recording settings.

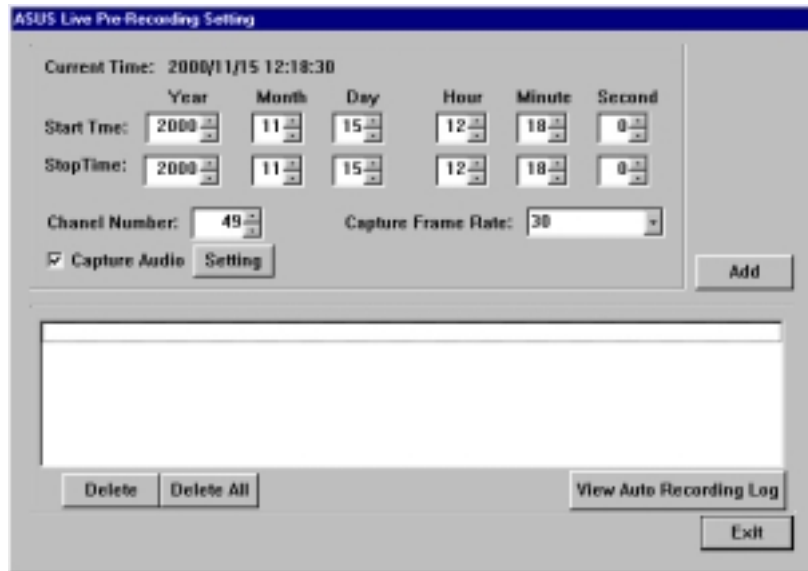

These settings include the **Start Time** (Year | Month | Day | Hour | Minute | Second), **Stop Time** (Year | Month | Day | Hour | Minute | Second), **Channel Number**, **Capture Frame Rate**, and options to **Add Audio** to the recording, **View Auto Recording Log**, and to **Delete** one or **Delete All** the pre-recording settings.

2. Click **Add** to add your pre-recording setting/s.

The video recording will start at the designated date and time.

NOTE: The video recording settings assume that you have a video device connected to your ASUS graphics card and that the device is turned on and running.

Snapshot

Snapshot (*hotkey*: F5) lets you capture video stream data as single images and then show these images on your desktop almost simultaneously through the default image viewer. It supports any plug-in picture viewer/image processing program to view the captured images (*see* **ASUS Live Control Panel** earlier in this section).


To begin capturing, do the following:

1. Click **Snapshot** on the ASUS Live Control Panel or press the F5 key to capture the desired image on ASUS Live Video's display screen.

The screen will freeze momentarily and the captured image (saved as a BMP file, using consecutive numbers) will be previewed in the **Preview Files** window.

You may click an image to view that captured image.

2. Repeat Step 1 as necessary.

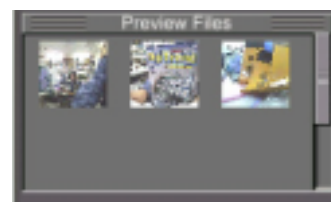


4. Software Reference

Frame Recording

Frame Recording (*hotkey: F6*) lets you capture video stream data as consecutive images and then show these images on your desktop through your default movie player. **Frame Recording** is useful in animation.

To begin capturing, do the following:

1. Click **Frame Recording** on the ASUS Live Control Panel or press the F6 key to open the **Capture Frames** box.
2. Click **Capture** to begin capturing the desired frame or frames on ASUS Live Video's display screen and then click **Done** when the desired end frame is reached. The initial frame of the captured video (saved as an AVI file) will immediately be displayed on your movie player.

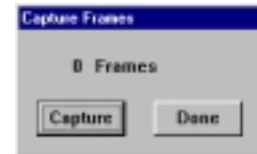

Video Recording

Video Recording (*hotkey: F7*) lets you capture video stream data continuously and then show these images on your desktop through your default movie player.

To begin capturing, do the following:

1. Click **Video Recording** on the ASUS Live Control Panel or press the F7 key.
2. Follow the on-screen instructions to begin and then stop video recording.



NOTES

1. **Windows 2000/NT4.0:** The capture performance quality under Windows 2000/NT 4.0 is not as good as that under Windows 98.
2. **Windows NT 4.0:** To run ASUS Live Video, Windows NT 4.0 Service Pack 3 or later must be installed on your computer. You may download service packs at <http://www.microsoft.com/networkstation/downloads>.
3. **Windows 2000/NT 4.0:** To enhance capture performance, select **UYVY** as the capture format size and **ASUS ASV2** as capture CODEC.

4. Software Reference




ASUS SmartDoctor

ASUS SmartDoctor is designed to satisfy two major goals. One is to monitor the graphic chip status, alerting users about abnormal events, such as fan malfunction or chip overheat. The other, as the name “SmartDoctor” implies, is to “cool” down the graphic chip smartly when it is not necessary for it to be kept running at full speed.

Functions

- Monitors graphic chip temperature, fan speed and voltage
- Notifies users about irregular hardware events, such as temperature overheat, fan malfunction, and out-of-safe-range voltage.
- Forcibly cools down the graphic chip when the graphic chip’s temperature is over an acceptable temperature, to protect the graphic chip from overheat damage.
- Cools down the graphic chip’s temperature when it is idle, and restores it to its maximum capability once needed, thus smartly extending the graphic chip’s lifetime.
- Cools down the CPU’s temperature (for Windows 98/98 Second Edition only) to lengthen CPU lifetime.

AGP Bus VDDQ Voltage Graphic Chip Temperature

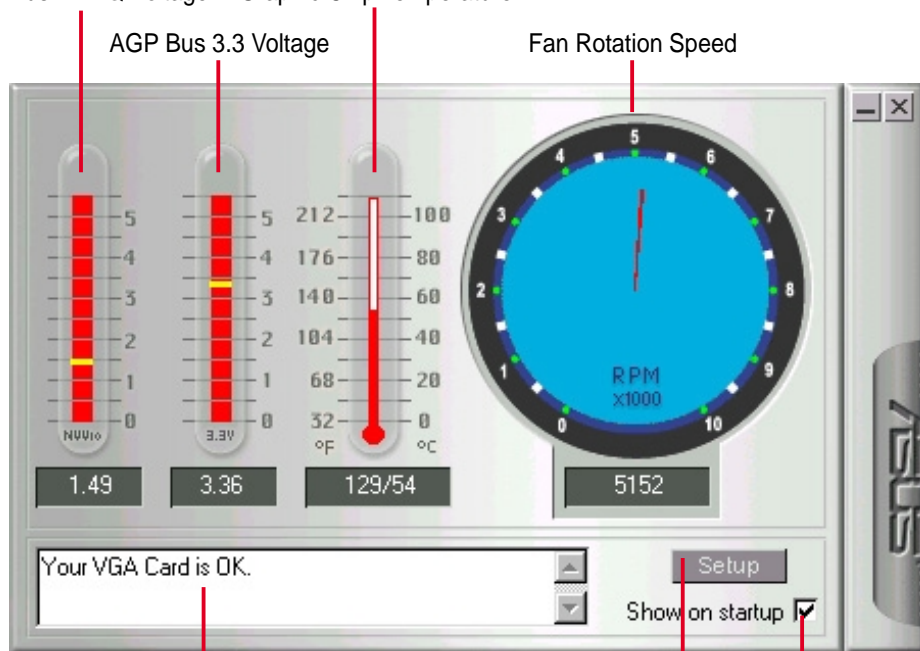

Message Display Region

Advanced Setup Button

Select to show this main window at Windows startup

NOTE: AGP bus VDDQ Voltage and AGP bus 3.3 Voltage should be supplied steadily by your motherboard, otherwise, your system will crash.

4. Software Reference

Advanced Setup

When you click the **Setup** button, the **Advanced Setup** dialog box appears.



The default setting of SmartDoctor is **Run once and terminate**, which means that SmartDoctor will run every time Windows starts and checks the graphic card's status.

If your graphics card is working properly, SmartDoctor will just exit or terminate in 5 seconds.

If you want SmartDoctor to continue running in the background and to monitor your graphic card's status, select **Run and keep resident**.

Dynamic Settings will become available when you select **Run and keep resident**.

- **Monitoring polling time interval** lets you specify the time intervals that SmartDoctor will take to check the graphic chip. The default setting is 5 seconds. You can choose a longer time interval value. SmartDoctor, however, will be less sensitive to graphic chip condition changes.
- **Enable CPU cooling** allows you to enable or disable the CPU cooling option. Enabling CPU cooling option will cool down the CPU's temperature when SmartDoctor detects that CPU is idle. The CPU's temperature will then drop.


NOTE: If you have already installed any CPU cooling software in your system, you should just choose only one. Running more than one CPU cooling software at the same time is redundant.

After CPU cooling is enabled, and when you run **System Monitor** in *Programs–Accessories–System Tools* to monitor CPU usage, you will find that CPU usage has reached its maximum, that is, 100%. Do not be alarmed—this is normal.

- **Enable dynamic graphic cooling** allows you to enable or disable the dynamic graphic cooling option. Enabling the graphic cooling option will cool down the graphic chip's temperature when SmartDoctor detects that the graphic chip is idle.
- **Enable overheat protection** lets you forcibly cool down the graphic chip when temperature is over the tolerable range or value.

When you select **Run and keep resident** and then click **OK**, a dialog box appears to warn you of a possible graphic performance drop. This performance penalty is very slight and almost undetectable even under rigorous examination by benchmark programs.


4. Software Reference

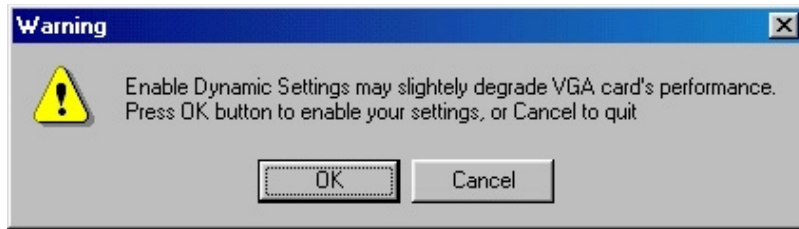

Press **OK** to set your modifications or **Cancel** to retain the original settings

Abnormal Events

When SmartDoctor senses that something is wrong with your card's graphic chip, the message display region will display a detailed description of the error or trouble. The component in question will also have a flashing red value. If you enabled overheat protection in **Advanced Setup** dialog, SmartDoctor will cool down the graphic chip in time to protect it from possible overheat damage.

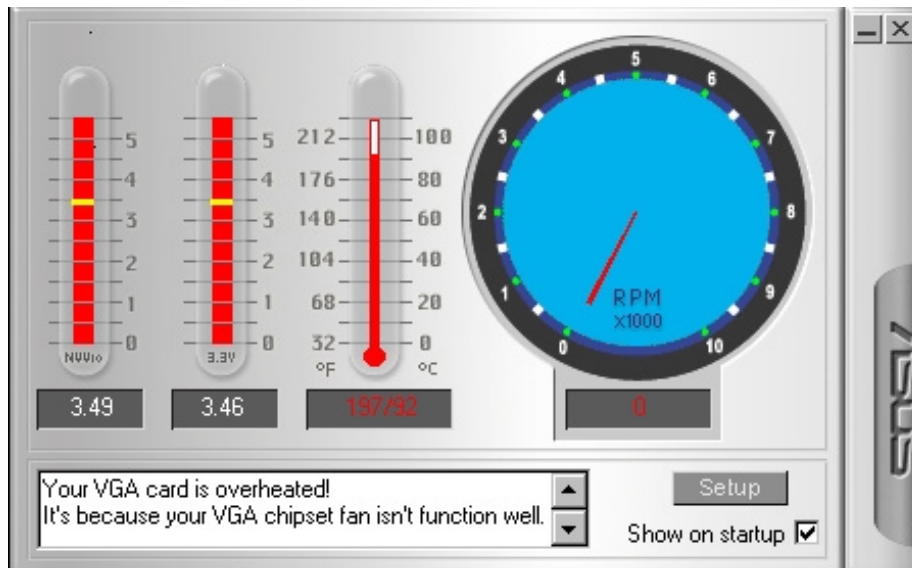

4. Software Reference



ASUS Digital VCR

NOTES

1. The following can only be used as a general reference and may not be an exact reflection of the software version you are using. The contents are subject to change at any time without notice.
2. ASUS Digital VCR can only be used with the TVR model (models with a Video Decoder) and monitors or monitor drivers that are designed for I2C bus control.
3. ASUS Digital VCR currently only supports Windows 9x/ME.

ASUS Digital VCR can be used to:

1. View images using your monitor as screen from traditional consumer devices, such as videocassette players, camcorders, digital cameras, and laser disc players through the onboard RCA or SVHS VIDEO-IN connectors.
2. Capture live motion video up to 30 frames/second (minimum system requirement: Pentium II/266). For TimeShifting™ recording at MPEG-II format (704x480, 30 frames/second), minimum system requirement is Pentium III/600 (recommended: Pentium III/700 or higher).

NOTE: You should already have installed DirectX 7 or later to use ASUS Digital VCR (see 3. **Software Setup | Install DirectX**)

Running ASUS Digital VCR

To run the utility, click **Start** and point to **Programs** and then **ASUS Digital VCR** and then click **ASUS Digital VCR**.

You may also run ASUS Digital VCR by clicking or right-clicking the ASUS Control Panel icon (see 4. **Software Reference | ASUS Control Panel**) on the taskbar's status area to display the ASUS Control Panel, pointing to **ASUS Digital VCR**, and then clicking it.

Uninstalling ASUS Digital VCR

To uninstall the software, click **Start** and point to **Programs** and then **ASUS Digital VCR** and then click **Uninstall**. You may also uninstall the software using the **Add/Remove Programs Properties** dialog box at the **Windows Setup** tab. See Windows online help for more information on removing a Windows component.

4. Software Reference

Using ASUS Digital VCR

ASUS Digital VCR has been designed as a standard Windows program. That is, functions can be accessed by means of the main menu bar or by clicking the toolbar buttons on the program window. It has three operational modes: **Live Mode**, **Capture Mode**, and **Playback Mode**.

Menu bar



Toolbar buttons

ASUS Digital VCR monitor



Monitor toolbox



To resize the monitor, drag a window corner (pointer becomes a double-headed arrow when it is ready) to the desired size. The video size status will also change accordingly.

Video standard
(see **Notes** below)

Video size
(Default: 352x240)

NOTES: Users of PAL D/K models of the graphics card should select PAL-BGHI for the Video Standard.

Monitor Toolbox



Exit (Click to quit ASUS Digital VCR)


OSD Setup (Click to set up the video source and adjust Brightness/Contrast and Saturation/Hue; see **On Screen Display** later in this section)

Minimize all window (Click to minimize monitor and program window)

Zoom out window

Zoom in window


Enable Always on Top (see **Always on Top** later in this section)

When Always on Top is enabled, this icon changes into  (Disable Always on Top)

4. Software Reference

Enable Always on Top

The **Enable Always on Top** option is provided for users who may wish to continue watching VCD/DVD/TV programs or want to have the ASUS Digital VCR monitor visible while doing other tasks, such as when downloading files from the Internet or word processing. To keep the monitor always on top of other programs, click the **Enable Always on Top** button or select the **Always on Top On** command from the **Window(W)** menu. Position the monitor where it will not interfere with your other tasks.


To disable the Always on Top option, click  or select the **Always on Top Off** command from the **Window(W)** menu.

OSD Setup

When first using ASUS Digital VCR, you must set up the video source. Use the **OSD Setup** button on the ASUS Digital VCR Control Panel to show or hide the video source setup screen on the monitor.



Use your mouse/pointing device or the UP and DOWN arrow keys on your keyboard to select options (*Brightness, Contrast, Saturation, Hue, Connector*) and then the LEFT (select to the left or to decrease) or RIGHT (select to the right or to increase) arrow keys to change an option. You may also use your mouse/pointing device to change an option by clicking the appropriate item or slider.

To set the settings back to its default, click  (or use the F9 hot key or select **Video Source** on the **Setup(S)** menu) and then click **Reset Video** in the **Video Source** tab. Click **OK** to close the **Video Source** tab.

4. Software Reference

Live Mode 




The default mode when you open ASUS Digital VCR is **Live Mode**, which lets you view live video. Under this mode, the VCR monitor can be resized (default size: 352x240) by dragging either of the four window corners (*see* preceding illustration on the ASUS Digital VCR monitor). Live video can also be viewed in full screen mode or set as desktop wallpaper.

To switch to Live Mode from Capture Mode, click  or press F2.


Enable full screen display


To *Enable full screen display*, click  or use CTRL+S.

To disable full screen display, double-click the display and then click . You may also use CTRL+S or ESC to disable full screen display. The display will then revert to its previous size.

Enable wallpaper display

NOTE: Before using the *Enable wallpaper display* option, make sure that the **View as Web Page** option of the Active Desktop setting is not selected (*see* **Start – Settings – Active Desktop – View as Web Page**).


To *Enable wallpaper display*, click  or use CTRL+W.

To disable desktop wallpaper, double-click anywhere the display and then click . You may also use CTRL+W to disable the desktop wallpaper.

Video Source Setup

To set up *Video Source*, click .

Video Source lets you set the display video method, video scan option, video standard, brightness/contrast, saturation/hue and other options.

To use **Video Source**, click  (or use the F9 hot key or select **Video Source** on the **Setup(S)** menu).

4. Software Reference



Display Video Method

Display Video Method lets you select ways to display video on your monitor: *BOB* (default) or *WEAVE*. These methods are simple ways of correcting interlaced display. ASUS Digital VCR by default will use the bob method for correcting interlaced display. If your video contains no motion, weave would be a best choice. For more information, visit www.microsoft.com/hwdev/devdes/vpe.htm#Interleaved.

Video Scan Option

Video Scan Option lets you select the scanning method to use: *Normal* (default), *Skip Odd Field*, and *Skip Even Field*. Use this option to reduce the strobing effect that results from fast moving objects when rendering to video. *Normal* uses both fields to render the video output. For PAL output, use *Skip Odd Field* and for NTSC output, use *Skip Even Field*.

Video Standard

Video Standard lets you select the video standard to use for display: *NTSC-M* (default), *NTSC-N*, *NTSC-4.43*, *PAL-BGHI*, *PAL-M*, *PAL-N*, *PAL-4.43* or *SECAM*.

NOTE: Users of the PAL D/K models should select PAL-BGHI for the Video Standard.

If desired, you may adjust the Brightness, Contrast, Saturation, and Hue of the VCR monitor. Use your mouse/pointing device to make the necessary adjustments.

Click again the **Video Source Option (F9)** button on the ASUS Live Control Panel to exit from the video source option screen.

Use Hardware Pre-filtering function

Use Hardware Pre-Filtering function (default: disabled) lets you use your graphics card for pre-filtering (pre-smoothing the image before compression encoding).

4. Software Reference

Capture Mode



Capture Mode lets you capture and store images into your computer. It has three capture options: **Video Snapshot**, **Capture Frames**, and **Capture Video**. Video Recording adds an auto-timer recording function that allows you schedule your video recording (see **Auto Recording** later in this section).

To switch to Capture Mode from Live Mode, click  or press F3.


Captured images are shown on the Preview Library. Double-click an image to play it back or view it with the associated image viewer or application (the path and file name of the selected image is shown below the image). You may also right-click an image or select an image and then click the appropriate button to **Playback** (or view), **Save As** (a new file), or **Delete** that image.

Setup

To set up *Video Capture*, click .

Video Capture

Video Capture lets you set the snapshot and video capture settings.

To use **Video Capture**, click  (or use the F9 hot key or select **Capture Mode** on the **Setup(S)** menu).



4. Software Reference

IMPORTANT: It is the intent of ASUS that this product be used in full compliance with the copyright laws of your respective and other countries and that prior permission be obtained from copyright owners whenever necessary.


Windows 98

When you install the Windows 98 Driver of your ASUS graphics card (only models with the VIDEO-IN connector), the video capture driver will automatically be installed on your system. This video capture driver follows Microsoft Video for Windows standard and can open **up to a capture window size of 704 x 480**. It can be used with some applications that use video capture as an option, such as video conferencing, net meeting, or digital video authoring applications.

IMPORTANT: You must enable the DMA transfer mode of your hard disk (EIDE HD) to get the maximum data transfer capability (**704 x 480, 30 frames/second**) during the video capture process. Otherwise, your system may become unstable.


4. Software Reference

Setting Up for Capturing Images

You must be in capture mode to capture images. To do this, click  on the ASUS Digital VCR toolbar.

NOTE: ASUS Digital VCR will automatically detect and warn you if the capture driver installed in your system is not compatible with ASUS Digital VCR.

Snapshot

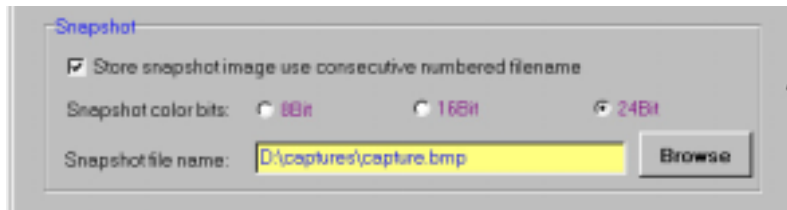


Store image use consecutive numbered filename: Select preferred file naming convention (*default:* selected)

Snapshot color bits: Select preferred color bits (*default:* 24Bit)

Snapshot file name: Type preferred path and file name (*default:* C:\CAPTURE.BMP).

You are now ready to capture video snapshots (F5).

Video Capture

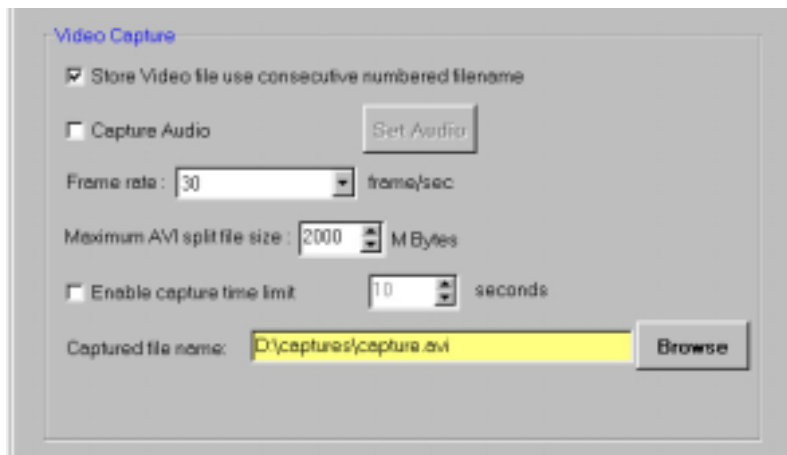


Store Video file use consecutive numbered filename: Select preferred file naming convention (*default:* selected)

Capture Audio: Select if you prefer to include audio when capturing video (*default:* not selected). When selected, the **Set Audio** option becomes available.

4. Software Reference

Set Audio displays the **Sound Selection** dialog box, which lets you save a scheme for your audio setting or select from a list, select the audio format type and audio format attributes of the video to be captured.

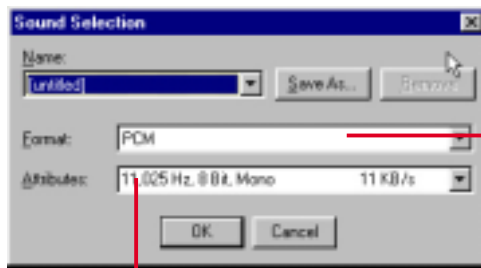

(PCM, which means Pulse Coded Modulation or uncompressed audio data, is currently the only available selection)

Selecting a lower quality format, for example, *,000 Hz, 8 Bit, Mono 11KB/s, will make your video file size smaller while a higher quality format, for example, 44,100 Hz, 16 Bit, Stereo 172 KB/s, can make the sound quality of your video file better, but your video file size will be larger.

Frame rate lets you select the preferred video data rate for the images to be captured (*default*: 30 frame/sec, which is full motion).

Maximum AVI split file size lets you set the maximum size for each video capture (*default*: 2000 M Bytes).

Enable capture time limit lets you limit the capture time (*default*: 10 seconds).

NOTE: Make sure that you have enough space on your hard disk drive. A 640x480 pixel video size, full-color (24-bit), full-motion (30 frames /sec) video capture requires about 27MB/sec (before compression).



Captured file name lets you set the path and file name of the images to be captured (*default*: C:\CAPTURE.AVI).

You are now ready to capture video images.

4. Software Reference

Auto Recording

Auto recording adds an auto-timer recording function that allows you to schedule your video recording.

To use **Auto recording**, click  (or use the F9 hot key) and then click the **Auto recording** tab or simply click  on the toolbar or select **Auto-Recording Setup** on the **Setup(S)** menu.



Auto recording includes the **Current time** (Hour:Minute:Second), **Start Time** (Year | Month | Day | Hour | Minute | Second), **End Time** (Year | Month | Day | Hour | Minute | Second), **Frame Rate**, **Channel**, and options to **Capture Audio** to the recording, **View Log** (of auto recorded events), and to **Delete** one or **Delete All** the pre-recording settings.

Add lets you add while **Clear** lets you clear your pre-recording setting/s.


The video recording will start at the designated date and time.


NOTE: The video recording settings assume that you have a video device connected to your ASUS graphics card and that the device is turned on and running.

4. Software Reference

Playback

Playback lets you set the options when playing back video files.

To use **Playback**, click  (or use the F9 hot key) and then click the **Playback** tab or simply select **Playback** on the **Setup(S)** menu.

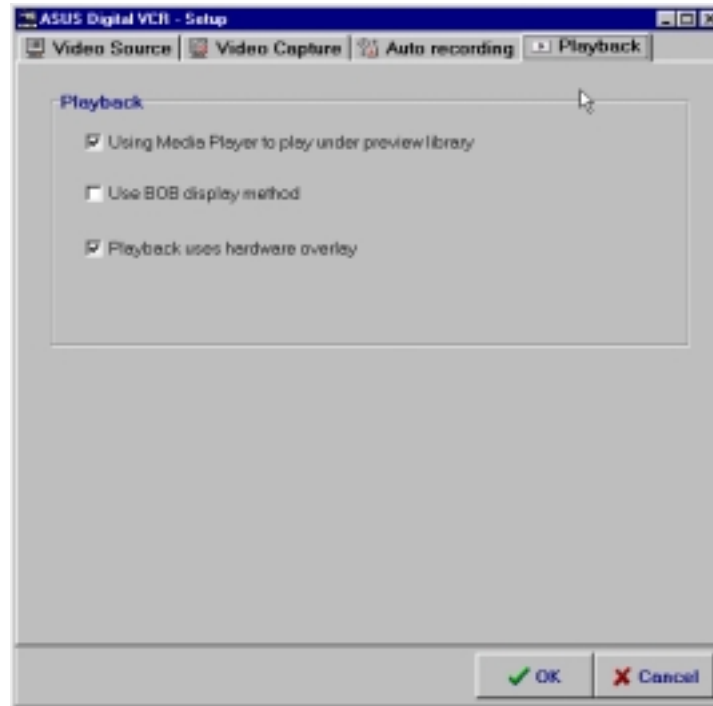


Capturing Images


Video Snapshot F5

Video Snapshot (*hotkey*: F5) lets you capture video stream data as single images and then show these images on your desktop almost simultaneously through the default image viewer. It supports any plug-in picture viewer/image processing program to view the captured images.

To begin capturing, do the following:

1. Click  on the ASUS Digital VCR toolbar or press the F5 key to capture the desired image from the ASUS Digital VCR monitor.

The screen will freeze momentarily and the captured image (saved as a BMP file, using consecutive numbers) will be previewed in the **Preview Library** window.



You may click an image to view that captured image.


2. Repeat Step 1 as necessary.

4. Software Reference

Capture Frames F6

Capture Frames (*hotkey: F6*) lets you capture video stream data as consecutive images and then show these images on your desktop through your default movie player. **Capture Frames** is useful in animation.

To begin capturing, do the following:


1. Click  on the ASUS Digital VCR toolbar or press the F6 key to open the **Capture Frames** box.
2. Click **Capture** to begin capturing the desired frame or frames on ASUS Digital VCR monitor and then click **Stop** when the desired end frame is reached. The initial frame of the captured video (saved as an AVI file) will immediately be displayed on your movie player.




Capture Video F7

Capture Video (*hotkey: F7*) lets you capture video stream data continuously and then show these images on your desktop through your default movie player.

To begin capturing, do the following:

1. Click  on the ASUS Digital VCR toolbar or press the F7 key.
2. The Video Capture Setup dialog box opens. Set the different options as desired and then click **Start**. Click **Stop** when the desired end frame is reached. The initial frame of the captured video (saved as an AVI file) will immediately be played back.

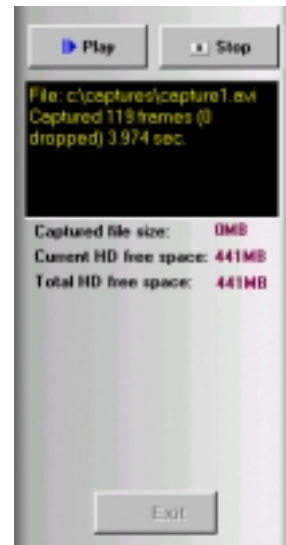

NOTE

1. With the new TimeShifting™ technology from ASUS, you can start playing back the captured video anytime (*see TimeShifting™* later in this section), even while recording!

4. Software Reference

TimeShifting™

The innovative TimeShifting™ feature of the ASUS Digital VCR lets you record incoming video feeds into a buffer. So if you're watching your favorite TV show on your computer and you had to leave but you don't want to miss the rest of the show, all you need is to record it with ASUS TimeShifting™. When you come back, you don't have to wait (unlike traditional recorders) for the recording to finish to be able to watch what's been recorded. Just click **Play** and playback will start immediately (this while recording still continuing in the background)!




4. Software Reference


Playback Mode




Playback (*hotkey: F4*) lets you play back captured video stream data using ASUS Digital VCR.

To begin playback, do the following:

1. Click  on the ASUS Digital VCR toolbar or press the F4 key.
2. The **Open** (video file) dialog box opens. Double-click the video file you want to open. You may need to locate the drive or folder that contains the file.
3. Playback immediately begins. A progress indicator will show the elapsed time.

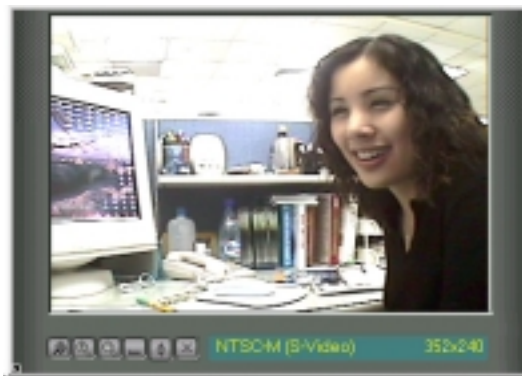

Progress Indicator

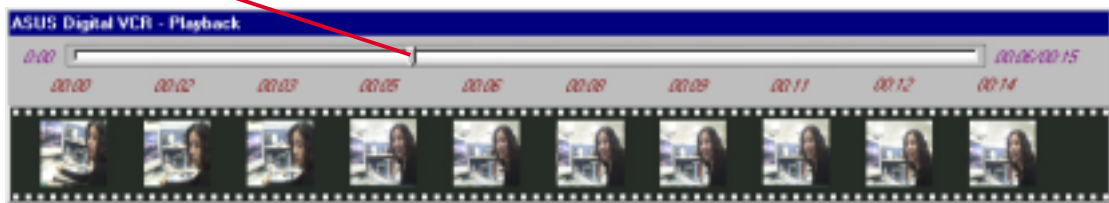

NOTES

During playback,

1. You may apply some filters to create effects on your video. Simply click **Filters** to apply a filter to the video file.
2. You may apply **Fast Motion**, **Slow Motion**, and other effects. Simply select any of the effects on the **Play(P)** menu or click any of the buttons on the Playback toolbar.



4. Software Reference

Using the Other Utilities



ASUS TWAIN Interface

Windows 98 Only


TWAIN is a cross-platform interface for acquiring images captured by scanners, digital cameras, and frame grabbers. The ASUS TWAIN Driver is currently supported only when used with Adobe Photoshop® (see www.adobe.com for details). If you already have Photoshop installed and you chose to install the ASUS TWAIN Driver, you can use Photoshop to import a still image using the ASUS TWAIN interface installed.

NOTE: The following steps assume that you are already running Photoshop and that you have already connected a compatible and working capture device, such as a web cam, to your system.

Using the ASUS TWAIN Interface for the First Time

1. From the **File** menu, click **Import** and then **Select TWAIN_32 Source** to specify the capture option.


Select **ASUS Frame Capture Source**.

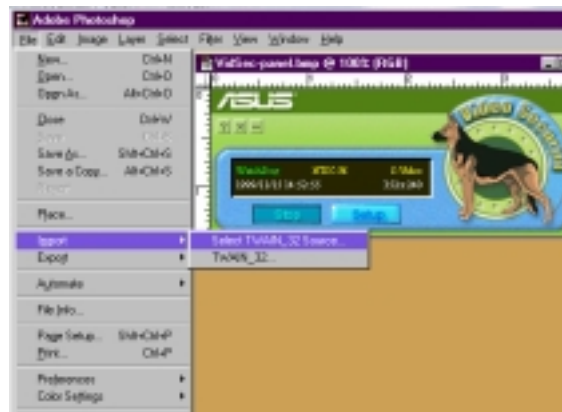

NOTE: You do not need to repeat this step for subsequent uses of the ASUS TWAIN module. If more than one TWAIN device is installed in your system and you want to switch devices, use **Select TWAIN_32 Source** command.

Importing an Image Using the ASUS TWAIN Interface

1. From the **File** menu, click **Import** and then **TWAIN_32**.

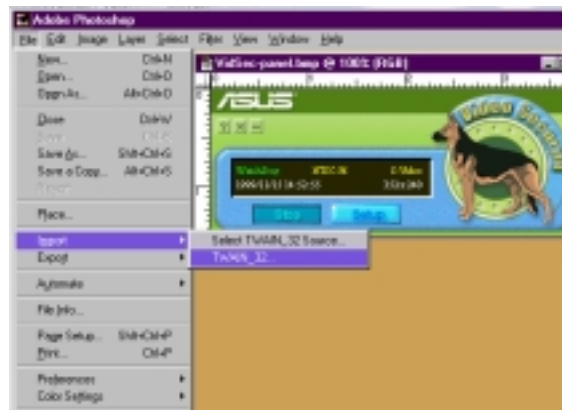

4. Software Reference

- When the ASUS TWAIN Driver utility appears, click **Options** and then **Video Format**.




- In the **Image Format** list of the **ASUS Video Format** dialog box, click **24 bit RGB**.



- Click **Options** and then **Video Format** to select your video source. If desired or necessary, you may adjust the **Brightness**, **Contrast**, **Saturation**, and **Hue** of your image.


You are now ready to capture.

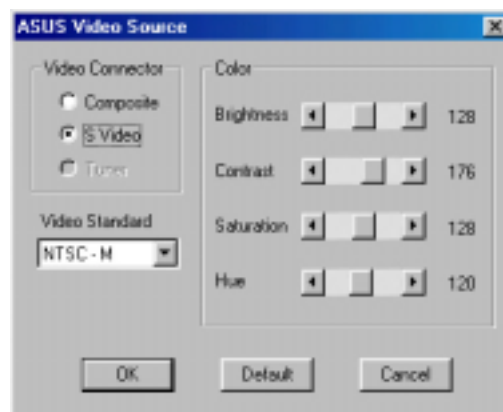



- To capture, click the capture button  or click the **Capture** menu and then **Single Frame**.

Other Options

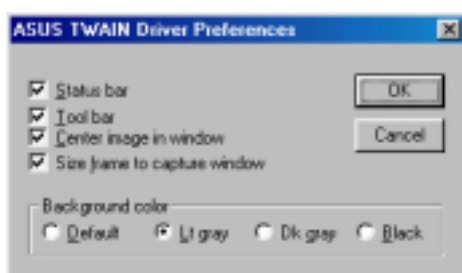Preferences Menu: Click to adjust the background color of your image and other options.



 **Toggle preview video:** Click button or click the **Options** menu and then **Preview** to toggle between the preview video options. A pressed button (or a checked **Preview** command) indicates that the preview is on and vice-versa.

 **Toggle overlay video:** Click button or click the **Options** menu and then **Overlay** to toggle between the overlay video options. A pressed button (or a checked **overlay** command) indicates that the overlay preview is on and vice-versa.

4. Software Reference



ASUS VR PictureViewer

Optional


ASUS VR PictureViewer lets you view stereo images, size your stereo image, set the VR effect of your 3D glasses (ASUS VR-100G), and test your 3D glasses' functionality.



To run ASUS VR PictureViewer, click or right-click the ASUS Control Panel icon (see **4. Software Reference | ASUS Control Panel**) on the taskbar's status area to display the ASUS Control Panel, point to **VR PictureViewer**, and then click it.


Opening or Displaying a Stereoscopic or 3D File

1. Click the **VR Effect** menu and then click **VR On** to enable stereoscopic display.

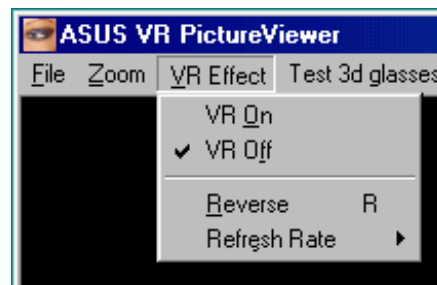


4. Software Reference

- Click the **File** menu and then click **Open** to select a file. Select the file from the **Open** dialog box or select another folder and then click **Open**. The 3D image appears on the VrViewer main window (see preceding page for an opened 3D image file. Note that the 3D effect is not shown in this picture).

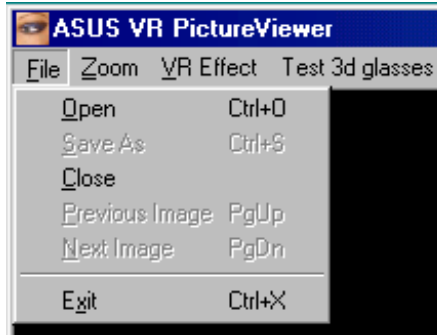


Changing the View

- Click the **Zoom** menu and then click the desired zoom percentage.

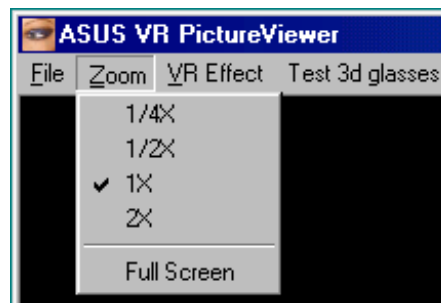

Testing the 3D Glasses

- Click the **Test 3D** glasses and then follow the onscreen instructions.

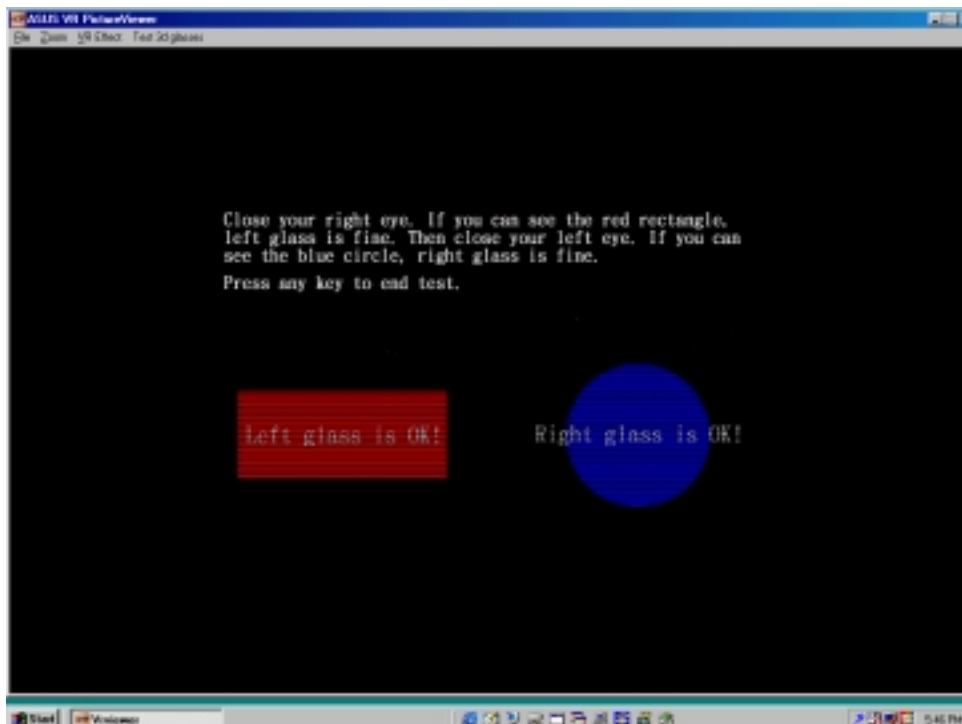

5. Resolution Table

Resolution	Vertical Frequency	Horizontal Frequency	Color Depth		
			8bpp = 256 colors Standard	16bpp = 65K colors High Color	32bpp = 16.7M colors True Color
640 x 480	60Hz	31.5	✓	✓	✓
	70Hz	34.9	✓	✓	✓
	72Hz	37.9	✓	✓	✓
	75Hz	37.5	✓	✓	✓
	85Hz	43.3	✓	✓	✓
	100Hz	51.0	✓	✓	✓
	120Hz	61.8	✓	✓	✓
	140Hz	72.9	✓	✓	✓
	144Hz	75.2	✓	✓	✓
	150Hz	78.7	✓	✓	✓
	170Hz	90.3	✓	✓	✓
	200Hz	108.0	✓	✓	✓
	240Hz	132.9	✓	✓	✓
800 x 600	60Hz	37.9	✓	✓	✓
	70Hz	43.8	✓	✓	✓
	72Hz	48.2	✓	✓	✓
	75Hz	46.9	✓	✓	✓
	85Hz	53.7	✓	✓	✓
	100Hz	63.7	✓	✓	✓
	120Hz	77.2	✓	✓	✓
	140Hz	91.1	✓	✓	✓
	144Hz	94.0	✓	✓	✓
	170Hz	112.7	✓	✓	✓
	200Hz	135.1	✓	✓	✓
	240Hz	166.2	✓	✓	✓
	1024 x 768	60Hz	48.4	✓	✓
70Hz		56.4	✓	✓	✓
72Hz		57.5	✓	✓	✓
75Hz		60.0	✓	✓	✓
85Hz		68.7	✓	✓	✓
100Hz		81.7	✓	✓	✓
120Hz		98.8	✓	✓	✓
140Hz		116.6	✓	✓	✓
144Hz		120.2	✓	✓	✓
150Hz		125.7	✓	✓	✓
170Hz		144.1	✓	✓	✓
200Hz		172.8	✓	✓	✓
240Hz		212.1	✓	✓	✓
1152 x 864	60Hz	53.7	✓	✓	✓
	70Hz	62.9	✓	✓	✓
	72Hz	64.9	✓	✓	✓
	75Hz	67.5	✓	✓	✓
	85Hz	77.1	✓	✓	✓
	100Hz	91.3	✓	✓	✓
	120Hz	111.2	✓	✓	✓
	140Hz	131.3	✓	✓	✓
	144Hz	135.2	✓	✓	✓
	150Hz	141.4	✓	✓	✓
	170Hz	162.9	✓	✓	✓
	200Hz	194.9	✓	✓	✓
	1280 x 960	60Hz	60.0	✓	✓
70Hz		69.9	✓	✓	✓
72Hz		72.1	✓	✓	✓
75Hz		75.2	✓	✓	✓
85Hz		86.0	✓	✓	✓
100Hz		101.7	✓	✓	✓
120Hz		123.5	✓	✓	✓
140Hz		145.1	✓	✓	✓
144Hz		150.5	✓	✓	✓
150Hz		157.2	✓	✓	✓
170Hz		179.8	✓	✓	✓

5. Resolution Table

Resolution	Vertical Frequency	Horizontal Frequency	Color Depth		
			8bpp = 256 colors Standard	16bpp = 65K colors High Color	32bpp = 16.7M colors True Color
1280 x 1024	60Hz	64.0	√	√	√
	70Hz	74.6	√	√	√
	72Hz	76.8	√	√	√
	75Hz	80.0	√	√	√
	85Hz	91.3	√	√	√
	100Hz	108.5	√	√	√
	120Hz	131.7	√	√	√
	140Hz	155.9	√	√	√
	144Hz	159.6	√	√	√
	150Hz	167.3	√	√	√
	170Hz	191.8	√	√	√
1600 x 900	60Hz	55.9	√	√	√
	70Hz	65.6	√	√	√
	72Hz	67.5	√	√	√
	75Hz	70.5	√	√	√
	85Hz	80.4	√	√	√
	100Hz	95.3	√	√	√
	120Hz	115.4	√	√	√
	140Hz	136.8	√	√	√
	144Hz	140.4	√	√	√
	150Hz	146.8	√	√	√
	1600 x 1200	60Hz	75.0	√	√
70Hz		87.5	√	√	√
72Hz		90.1	√	√	√
75Hz		94.0	√	√	√
85Hz		106.1	√	√	√
100Hz		127.5	√	√	√
120Hz		154.5	√	√	√
1920 x 1080	60Hz	67.1	√	√	√
	70Hz	78.7	√	√	√
	72Hz	81.1	√	√	√
	75Hz	84.6	√	√	√
	85Hz	96.4	√	√	√
	100Hz	113.9	√	√	√
1920 x 1200	60Hz	74.6	√	√	√
	70Hz	87.4	√	√	√
	72Hz	90.0	√	√	√
	75Hz	94.0	√	√	√
	85Hz	106.7	√	√	√
	100Hz	126.7	√	√	√
1920 x 1440	60Hz	89.4	√	√	√
	70Hz	104.9	√	√	√
	72Hz	108.5	√	√	√
	75Hz	112.5	√	√	√
	85Hz	129.4	√	√	√
2048 x 1536	60Hz	95.5	√	√	√
	70Hz	111.9	√	√	√
	72Hz	115.3	√	√	√
	75Hz	121.3	√	√	√

6. Troubleshooting

Description	Recommended Action
<i>After installation and re-starting, Windows 95/98 informs me that the display setting is still incorrect.</i>	<ul style="list-style-type: none">• Make sure the “Assign IRQ to VGA” option is enabled in the BIOS.• Check if there is enough IRQ for VGA.• Uninstall the driver, restart, and reinstall the driver.
<i>My monitor is not capable of high resolution or refresh rate.</i>	<ul style="list-style-type: none">• It depends on the display characteristics of your monitor. Consult your monitor documentation for the proper configuration.
<i>DirectX or the other applications report no AGP memory available.</i>	<ul style="list-style-type: none">• Windows 95 is not OSR2.1 or later.• DirectX version is not 6.0 or later.• You have not installed appropriate drivers for the AGP chipset. (e.g. VGARTD.VXD for Intel 440LX).• Incorrect BIOS setting. BIOS must support at least 64MB for AGP aperture size.
<i>Games or applications report “No 3D acceleration hardware found.”</i>	<ul style="list-style-type: none">• 3D works only in 16- or 32-bit color depth. Switch your color depth display mode to 16-bit (high color) or 32-bit (true color).• Check necessary libraries, such as DirectX or OpenGL.• Try to switch to a lower resolution.
<i>I cannot enable AGP memory or run I-Base test.</i>	<ul style="list-style-type: none">• You may be using a motherboard with an Aladdin IV AGPset. To get the best compatibility, the display card uses AGP Bus Master mode instead of AGP execute mode for motherboards using this AGPset.
<i>My MPEG player displays bad quality video clips.</i>	<ul style="list-style-type: none">• You must install DirectX 6 or later so that your player can take advantage of the hardware acceleration mode (DirectDraw).• Try to switch to a lower resolution, color depth, or refresh rate. Switching to a lower mode allows your player to use hardware acceleration mode.• Switch dual view mode to VGA or TV mode.
<i>I can't use VideoSecurity with my USB CCD or IEEE 1394 CCD.</i>	<ul style="list-style-type: none">• VideoSecurity currently only supports S-Video or Composite CCDs. Any device used must be connected to an ASUS video card.
<i>I am using Video Security and it seems my hard disk space is almost exhausted.</i>	<ul style="list-style-type: none">• This is a very important issue when you decide to use VideoSecurity with the “never stop” option. You must be aware of the free space of your hard disk—it must be enough for storing temporary files in the current working directory. If disk space is exhausted, VideoSecurity will not store any information and give you a warning message.

6. Troubleshooting

I am using VideoSecurity and I set the password option. I have forgotten my password, though. Is there a way to recover my password?

- The only way to remove password protection is to recall the original password that you assigned. The password protection is still active even when you uninstall VideoSecurity and install a new copy. Make sure that the password that you assigned can be easily remembered. You may write down your password and store it in a safe place.

INDEX

Symbols

15-pin VGA connector 11
16 / 32 bit color 97
2D test 59
2X 50
3D antialiasing settings 50
4X 50

A

Abnormal events 76
Active color channel 49
Add audio 72
Additional properties button 50
Adjust source 71
Adjust Z-buffer depth 51
Advanced 76
 Box 39, 42
 Button 45
 Menu 37
 Setup 76
AGP bus expansion slot 11
Allow
 Applications 50
 Dual planes extension 53
Always on top 63, 67, 79
Analog monitor
 Connecting 11
Analog monitor submenu 46
 Display timing 46
 Screen adjustments 46
Application management 56
Asus
 Utilities 59
 VR picture viewer 93
 VR-100 upgrade kit 41
 VR-100G 3D glasses 41, 93, 94
Auto
 -detect 46
 -recording 82, 86
 -select 48, 53
Automatically apply 49
Available models 7

B

Background 37, 40
Blind 37, 40
Brightness 35, 36, 40, 43, 48, 49, 92
Buffer flipping mode 53

C

Capture
 Audio format 70, 84, 86
 Basic setting 70
 CODEC 70, 73
 Frames 73, 82, 88
 Image dimension 70
 Menu 92
 Mode 66, 68, 78, 82
 Video 82, 88
Captured file name 85
Capturing images 70, 87
CCD 61, 97
Centered output 47
Change
 Default hot keys 39, 42
 Format 48
 TV format 48
Changing the view 94
Channel
 Number 72, 86
Chip temperature 74
Color
 Menu 35
 Spline 36
Color correction submenu 49
 Active color channel 49
 Automatically apply 49
 Brightness / contrast / gamma 49
 Custom color settings 49
Contrast 35, 36, 40, 43, 48, 49, 54, 92
Control panel 33, 45
 More resolution 34
 Refresh rate / resolution 33
Current time 86
Custom
 Color settings 49
 OpenGL settings 53

D

D3D/OSD histogram 40
Default color depth 53
Define tracing procedure 62
Delay before switching 58
Delete 72, 86
Delete image 82
Deluxe TVR models 41
Depth 37, 40

INDEX

- Desktop display manager 56
 - Application management 56
 - Displaying from any program 57
 - Global settings 57
 - Hot keys 57
 - Setting up 56
 - Zoom 58
 - Delay before switching 58
 - Enable zoom 58
 - Hotkeys 58
 - Update frequency 58
- Desktop utilities 55
 - Display quick tweak icon 55
 - Using quick tweak icon 55
- Detecting region 63
- Device adjustments 48
 - Brightness / flicker filter / contrast 48
 - Screen positioning 48
- Device settings submenu 45
 - Color correction 49
 - Device selection status
 - Analog monitor 47
 - Digital flat panel 47
- Digital flat panel
 - Centered output 47
- Digital VCR 77
 - Always on top 79
 - Capture mode 78, 82
 - Auto recording 86
 - Capture frames 88
 - Capture Video 88
 - Capturing images 87
 - Setup 82
 - Snapshot 84
 - Video capture 84
 - Full screen display 80
 - Live mode 78, 80
 - Monitor toolbox 78
 - OSD setup 79
 - Playback 78, 87, 90
 - Running 77
 - TimeShifting 89
 - Uninstalling 77
 - Using 78
 - Video source setup 80
 - Display video method 81
 - Video scan option 81
 - Video standard 81
 - Wallpaper display 80
- Digital vibrance 49
- Direct3D menu 35, 40, 50
 - General functions 36
 - VR Effect 37
- Direct3D settings 51
 - Mipmapping 51
 - Custom 3D settings 51
 - Detail level 51
 - PCI texture memory size 51
 - More direct3D
 - Texel alignment 52
 - Performance and compatibility 51
 - Adjust z-buffer 51
 - Display logo 51
 - Enable alternate depth 51
 - Enable fog table 51
- Direction 37, 40
- DirectX 97
- Disable
 - Always on top 79
 - Antialiasing 50
 - Desktop wallpaper 80
 - Full screen display 80
 - Monitor check 38, 41, 53
 - Support for enhanced CPU 53
- Discrete monitor timing 46
- Display
 - Logo 51
 - Quick tweak icon 55
 - Stereoscopic / 3D file 93
 - Video method 81
- Display driver installation 13
 - Windows 2000 15
 - Windows 98 13
 - Windows NT 4.0 18
- Display properties 33, 44, 45, 55
 - Advanced settings 45
 - GeForce2MX 50
- Display timing 46
 - Auto-detect 46
 - Discrete monitor timings 46
 - General timing formula 46
- Don't ask 71
- Drivers 19
 - ASUS TWAIN driver 23
 - DirectX 20
 - Display driver 19
 - GART driver 21
- DVD playback quality 54

INDEX

- Dynamic
 - Graphic cooling 75
 - Settings 75
- E**
- E line 40
- Embossment 37, 40, 41, 43
- Enable
 - Alternate depth buffering 51
 - Always on top 79
 - Anisotropic filtering 53
 - Buffer region extension 53
 - CPU cooling 75
 - Desktop manager 55
 - DMA transfer mode 69
 - Dynamic graphic cooling 75
 - Fog table 51
 - Full screen display 80
 - OSD 39, 42
 - Overheat protection 75
 - Stereoscopic mode 37
 - Video overlay zoom 54
 - Wallpaper display 80
 - Zoom feature 58
- End time 86
- Engine 59
- Error processing 62
- Extended desktop mode 55
- Eyes 41, 43
- F**
- Fast motion 90
- Features 8
- File name 71
- Flicker filter 48
- Foreground 37, 40
- Frame
 - Capture source 91
 - Rate 71, 85, 86
 - Recording 73
- G**
- Gamma 35, 36, 40, 43, 49
- GeForce3 50
 - 3D antialiasing settings 50
 - Additional properties 50
 - Desktop utilities 55
 - Direct3d settings 51
 - Display manager 56
 - OpenGL settings 53
 - Overlay controls 54
 - Allow applications 50
 - Manually select antialiasing 50
- General functions
 - Color spline 36
 - Scheme 36
- General timing formula 46
- Global settings 57
- Graphics speed 59
- H**
- Highlights 7
- Histograms 40
- Hotkey 39, 42, 57, 58
- Hue 54, 92
- I**
- IC chips
 - Warning 11
- IEEE 1394 97
- Image
 - Filename 71
 - Format 92
 - Setting 71
- Import 91
- IMPORTANT 36, 39, 42, 63, 83
- Information menu 34
- Install
 - Asus TWAIN driver 23, 91
 - Asus Tweak utility 29
 - Asus V7100 series display driver 11
 - DirectX 13, 20, 77
 - Display driver 19
 - GART driver 13, 21
 - SmartDoctor 30
 - VideoSecurity 31
 - Windows 98 AGP video-in 83
- Installation procedures
 - New VGA cards 11
 - Systems with existing VGA card 11
- IRQ 97
- Irregular hardware events 74
- L**
- Layout
 - V8200 / Pure 10

INDEX

- V8200 Deluxe 9
- Limitations 61
- Line interleave 38, 41
- Live mode 78, 80
- Live Video 65
 - Capturing images 70
 - Frame recording 73
 - Manual video recording setting 71
 - SnapShot setting 71, 72
 - Video recording 73
 - Video/capture settings 70
 - Control panel 66
 - Always on top 67
 - Capture mode 66
 - Live mode 66
 - Video source option 67
 - Modes 68
 - Capture mode 68
 - Live mode 68
 - Running 65
 - Setup
 - Scheduled recording setting 72
 - Uninstalling 65
- Load default 37, 59
- M**
- Main program 38
- Manual video recording 71
- Manually select antialiasing 50
- Maximum
 - AVI 85
 - Capture time 71
 - Resolution 47
 - Speed performance 50
- Memory 59
- Minimum
 - System requirement 77
- Mipmapping 51
 - Custom Direct3D settings 51
 - Detail level 51
 - PCI texture memory size 51
- Mode 38, 41
 - Disable monitor check 38, 41
 - Line interleave 38, 41
 - Page flipping 38, 41
 - Refresh rate 38, 41
 - Stereoscopic 37
- Monitor
 - Always on top 79
- Analog 46
 - Check, disable 38, 41
 - Compatibility 38
 - Delay before switching zoom 58
 - Discrete timings 46
 - Drivers 12C bus control 77
 - IC 30
 - More resolution 34
 - Move the active window 57
 - Polling time 75
 - Refresh rates 42
 - Toolbox 78
 - VCR 80
- More direct3D 52
- More resolution 34
- MPEG player 97
- N**
- NTSC-M 48, 66, 67, 81
- NVIDIA icon 45
- O**
- Off 50, 53, 79
- On screen display 39, 42
 - Advanced 39, 42
 - Change defaults 39
 - Enable OSD 39, 42
 - Hotkey 39, 42
 - Setup 79
- OpenGL menu 35, 43, 50
 - General functions 36
 - VR effect 41
- OpenGL settings 53
 - Buffer flipping mode 53
 - Custom openGL settings 53
 - Default color depth 53
 - Performance and compatibility 53
 - Allow dual planes 53
 - Disble support for enhanced CPU 53
 - Enable anistropic filtering 53
 - Enable buffer 53
 - Use fast linear-mipmap 53
 - Use up to xMB 53
 - Vertical sync 53
- OS
 - System requirements 12
- Overheat protection 75, 76
- Overlay 92

INDEX

- Overlay controls 54
 - Brightness / contrast / hue / saturation 54
 - Check here 54
 - Enable video overlay zoom 54
 - Select screen region 54
 - Zoom control 54
- P**
- Page flipping 38, 41
- PAL 48, 66, 67, 78, 81
- Picture format 71
- Playback 78, 82, 87, 90
- Preallocate disk space 71
- Preview files 72
- Q**
- Quick Tweak icon 55
- Quincunx antialiasing 50
- R**
- Range 36, 52, 54
- RCA 65, 77
- Refresh rate 33, 38, 41, 42, 97
- Reset video 79
- Resolution
 - Refresh rate 33
 - Table 95
 - Win 95 users 34
- RGB 35, 49, 92
- Run and keep resident 75
- Running
 - Digital VCR 77
 - LiveVideo 65
 - VideoSecurity 64
- Running style 63
- S**
- S-Video 48, 97
- Safe mode recovery
 - Tweak 60
- Saturation 54, 79, 92
- Save As
 - Capture mode 82
- Scheduled recording 72
- Scheme 36, 38, 42, 85
- Screen adjustments 46
- Screen positioning 48
- SECAM 66, 67, 81
- Sensibility 62
- Set audio display 85
- Shortcut keys 64
- Single frame 92
 - Capture 59
- Slow motion 90
- SmartDoctor 74
 - Abnormal events 76
 - Advanced setup 75
 - Functions 74
- SnapShot setting 71, 72, 84
- Software
 - Installation procedures 11
- Sound selection 85
- Start time 72, 86
- Stereoscopic / 3D file 93
- Stereoscopic mode 37, 39, 41
- Stop detecting setting 62
- Stop time 72
- Store
 - Image 84
 - Original settings 33
 - Video file 84
- SVHS video-in 65, 77
- System monitor 75
- System requirements
 - Monitor refresh rates 39
 - OS 12
- T**
- Taskbar 33, 44
 - ASUS icon 33
 - NVIDIA icon 55
 - VideoSecurity icon 63
- Testing 3D glasses 94
- Texel alignment 52
- TimeShifting 88, 89
- Timing adjustment 59, 60
- Tips!
 - For VR 38
 - What's this? 45
- Toggle
 - Overlay video 92
 - Preview video 92
- Troubleshooting 97
- TV 48
 - Change format 48
 - Device adjustments

INDEX

- Brightness / flicker filter / contrast 48
- Tuner problems 54
- Video output format 48
- TVR model 77
- TWAIN interface 91
 - Importing an image 91
 - Other options 92
 - Using 91
- Tweak utility 59
 - Graphics speed 59
 - 2D test 59
 - Engine 59
 - Load default 59
 - Memory 59
 - Safe mode recovery 60
 - Timing adjustment 59
 - Use tweak settings 59
- Typical
 - D3D OSD settings 40
 - OpenGL OSD settings 43
- U
- Uninstall
 - Digital VCR 77
 - Display driver 20, 24
 - Windows 2000 25
 - Windows 98 24
 - Windows NT 4.0 25
 - Driver 24
 - LiveVideo 65
 - VideoSecurity 98
- Use
 - Asus utilities 59
 - Block transfer 53
 - Desktop color depth 53
 - Display adapter scaling 47
 - Embossment 38
 - Fast linear-mipmap 53
 - Hardware pre-filtering 81
 - Tweak settings 59
 - Up to X MB 53
- Utilities
 - Desktop 55
 - Digital VCR 77
 - Live 65
 - SmartDoctor 30, 74
 - TWAIN interface 91
 - Tweak 29, 59
 - VideoSecurity 31, 61
 - VR Picture Viewer 93
- Utility
 - Taskbar 44
- V
- Vertical sync 53
- Video
 - Format 92
 - Output format 48
 - Recording 73
 - Scan option 81
 - Snapshot 82, 87
 - Source option 67, 79, 80
 - Standard 81
- Video capture 69, 70, 82, 84
 - Capturing images 70
 - Enabling DMA transfer mode 69
 - Win 98 / Win2000-NT 4.0 69
- Video-in/TV-out 41, 61
- VideoSecurity 61
 - Define tracing procedure 62
 - Detecting region 63
 - Error processing 62
 - Limitations 61
 - Main window 63
 - Running 64
 - Sensibility 62
 - Setup wizard 61
 - Shortcut keys 64
 - Stop detecting 62
 - Working directory 63
- View
 - Angle 41, 43
 - Auto recording log 72
 - Log 86
- Voltage monitoring 74
- VR effect 37
 - Background 37
 - Blind 37
 - Depth 37
 - Embossment 37
 - Foreground 37
 - Load default 37
 - Main Program 38
 - Menu 93
 - Stereoscopic mode 37
- VR picture viewer 93
 - Changing the view 94
 - Opening or displaying Stereo/3D files 93

INDEX

Testing the 3d glasses 94
VR-100 upgrade kit 41
VR-100G 3-D glasses 41, 93, 94

W

WARNING

11, 18, 20, 29, 33, 38, 42, 45, 59

Windows desktop 33

Properties and settings 33

Windows display properties 45

Working directory 63

Z

Z-axis range 40

Zoom control 54, 58

NOTES
